


Type code

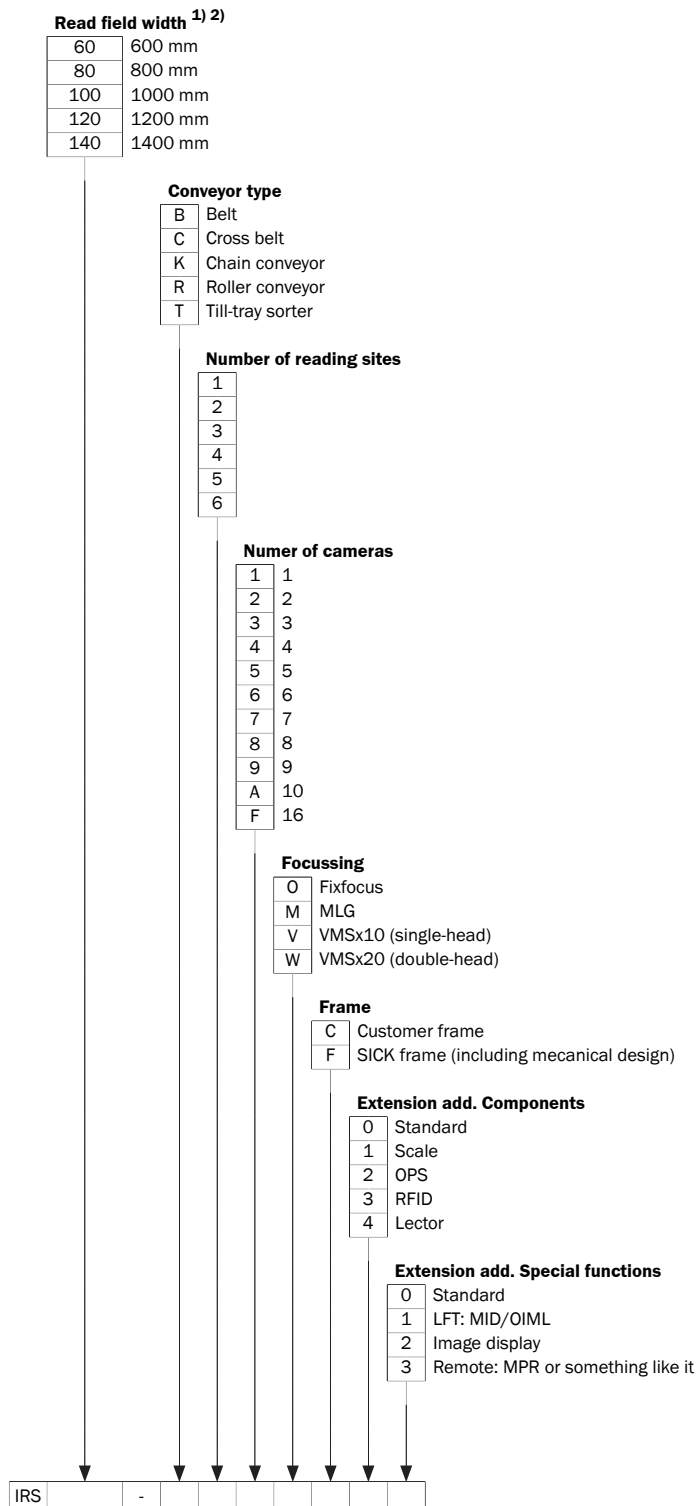

¹⁾ Assignment read field width: the tolerance is max. 50mm, e. g. at 650 mm read field width will be still a 060, 651 mm would already be a 080 system.

²⁾ The step of the read field width is fixed at 200 mm.