

# DIS-IPDTACCR0000

Frequency counter, tachometer and speed indicator with touchscreen and graphic display



---

**Described product**

DIS-IPDTACCR0000

**Manufacturer**

SICK AG  
Erwin-Sick-Str. 1  
79183 Waldkirch  
Germany

**Legal information**

This work is protected by copyright. Any rights derived from the copyright shall be reserved for SICK AG. Reproduction of this document or parts of this document is only permissible within the limits of the legal determination of Copyright Law. Any modification, abridgment or translation of this document is prohibited without the express written permission of SICK AG.

The trademarks stated in this document are the property of their respective owner.

© SICK AG. All rights reserved.

**Original document**

This document is an original document of SICK AG.



Certifications not valid for all types. See type label on the product or product data sheet on [www.sick.com](http://www.sick.com).

## Contents

<b>1</b>	<b>Product features.....</b>	<b>5</b>
<b>2</b>	<b>Safety Instructions and Responsibility.....</b>	<b>6</b>
2.1	General Safety Instructions.....	6
2.2	Use according to the intended purpose.....	6
2.3	Installation.....	6
2.4	EMC Guidelines.....	7
2.5	Cleaning, Maintenance and Service Notes.....	7
<b>3</b>	<b>Introduction .....</b>	<b>8</b>
3.1	Operation mode.....	8
3.2	Function diagram.....	8
<b>4</b>	<b>Electrical Connections.....</b>	<b>9</b>
4.1	DC Power Supply.....	9
4.2	Auxiliary Voltage Output.....	9
4.3	DIS-IPDTACCR0000: Incremental Input A, /A, B, /B .....	10
4.4	Control Inputs .....	11
4.5	Serial interface (Option CR).....	12
4.6	Control-Output CR.....	13
<b>5</b>	<b>Display and touch screen .....</b>	<b>14</b>
5.1	Screen structure for parametrization .....	14
5.2	Screen structure in operation.....	15
5.3	Error messages.....	17
<b>6</b>	<b>Parameter / Overview-Menu Structure.....</b>	<b>18</b>
6.1	General Menu.....	21
6.2	Speed A Settings.....	23
6.3	Speed B Settings.....	26
6.4	Counter A Settings.....	28
6.5	Counter B Settings.....	31
6.6	Collection Settings.....	33
6.7	Scaling Settings.....	34
6.8	Preselection Values.....	35
6.9	Preselection 1 Menu.....	35
6.10	Preselection 2 Menu.....	38
6.11	Preselection 3 Menu.....	39
6.12	Preselection 4 Menu.....	40
6.13	Serial Menu.....	42
6.14	Analog Menu.....	43
6.15	Command Menu.....	44
6.16	Display Menu.....	45
6.17	Linearization Menu.....	48

<b>7</b>	<b>Appendix.....</b>	<b>50</b>
7.1	Data readout via serial interface .....	50
7.2	Modbus RTU Interface .....	50
7.2.1	Parameter setting .....	51
7.2.2	Modbus Communication .....	52
7.2.3	Diagnostics.....	53
7.3	Parameter list / serial codes.....	54
7.3.1	Serial codes of commands: .....	59
7.4	Linearization .....	59
7.5	Dimensions.....	62
7.6	Technical specifications.....	63
7.7	Conformities and certificates.....	64
7.7.1	EU declaration of conformity.....	64
7.7.2	UK declaration of conformity.....	64

## 1 Product features

- Multifunction unit with operating modes for incremental encoders (tachometer, pulse counter, position indicator)
  - Operating modes as frequency display and / or position display (pulse counter)
  - Universal incremental inputs (HTL / TTL / RS422) for NPN / PNP / NAMUR encoders and sensors
  - Functions such as links (eg A+B, A-B, ...), scaling, filters, start-up delay, ...
- Bright and high-contrast display with event controlled color variations
- Emulation of a 7-segment display inclusively icons and units
- Intuitive and easy parameterization by plain text and touchscreen
- 5 / 24 V auxiliary output for encoder supply
- Input frequencies up to 1 MHz
- Linearization with 24 interpolation points
- 96 x 48 mm (3.78 x 1.89 inch) norm panel housing and IP65 protection

## 2 Safety Instructions and Responsibility

### 2.1 General Safety Instructions

This operation manual is a significant component of the unit and includes important rules and hints about the installation, function and usage. Non-observance can result in damage and/or impairment of the functions to the unit or the machine or even in injury to persons using the equipment!

**Please read the following instructions carefully before operating the device and observe all safety and warning instructions! Keep the manual for later use.**

A pertinent qualification of the respective staff is a fundamental requirement in order to use these manual. The unit must be installed, connected and put into operation by a qualified electrician.

**Liability exclusion:** The manufacturer is not liable for personal injury and/or damage to property and for consequential damage, due to incorrect handling, installation and operation. Further claims, due to errors in the operation manual as well as misinterpretations are excluded from liability.

In addition the manufacturer reserves the right to modify the hardware, software or operation manual at any time and without prior notice. Therefore, there might be minor differences between the unit and the descriptions in operation manual.

The raiser respectively positioner is exclusively responsible for the safety of the system and equipment where the unit will be integrated.

The raiser respectively positioner is exclusively responsible for the safety of the system and equipment where the unit will be integrated.

If the device is used in processes, where a failure or faulty operation could damage the system or injure persons, appropriate precautions to avoid such consequences must be taken.

### 2.2 Use according to the intended purpose

The unit is intended exclusively for use in industrial machines, constructions and systems. Non conforming usage does not correspond to the provisions and lies within the sole responsibility of the user. The manufacturer is not liable for damages which have arisen through unsuitable and improper use.

Please note that device may only be installed in proper form and used in a technically perfect condition (in accordance to the Technical Specifications). The device is not suitable for operation in explosion-proof areas or areas which are excluded by the EN 61010-1 standard.

### 2.3 Installation

The device is only allowed to be installed and operated within the permissible temperature range. Please ensure an adequate ventilation and avoid all direct contact between the device and hot or aggressive gases and liquids.

Before installation or maintenance, the unit must be disconnected from all voltage-sources. Further it must be ensured that no danger can arise by touching the disconnected voltage-sources.

Devices which are supplied by AC-voltages must be connected exclusively by switches, respectively circuit-breakers with the low voltage network. The switch or circuit-breaker must be placed as near as possible to the device and further indicated as separator.

Incoming as well as outgoing wires and wires for extra low voltages (ELV) must be separated from dangerous electrical cables (SELV circuits) by using a double resp. increased isolation.

All selected wires and isolations must be conform to the provided voltage- and temperature-ranges. Further all country- and application-specific standards, which are relevant for structure, form and quality of the wires, must be ensured. Indications about the permissible wire cross-sections for wiring are described in the Technical Specifications.

Before first start-up it must be ensured that all connections and wires are firmly seated and secured in the screw terminals. All (inclusively unused) terminals must be fastened by turning the relevant screws clockwise up to the stop.

Overvoltages at the connections must be limited to values in accordance to the over-voltage category II.

## 2.4 EMC Guidelines

All motrona devices are designed to provide high protection against electromagnetic interference. Nevertheless you must minimize the influence of electromagnetic noise to the device and all connected cables.

Therefore the following measures are mandatory for a successful installation and operation:

- **Use shielded cables for all signal and control input and output lines.**
- **Cables for digital controls (digital I/O, relay outputs) must not exceed a length of 30 m and are allowed for in building operation only**
- Use shield connection clamps to connect the cable shields properly to earth
- The wiring of the common ground lines must be star-shaped and common ground must be connected to earth at only one single point
- The device should be mounted in a metal enclosure with sufficient distance to sources of electromagnetic noise.
- Run signal and control cables apart from power lines and other cables emitting electromagnetic noise.

Please also refer to motrona manual "General Rules for Cabling, Grounding, Cabinet Assembly". You can download that manual by the link.

<https://www.motrona.com/en/support/general-certificates.html>

## 2.5 Cleaning, Maintenance and Service Notes

To clean the front of the unit please use only a slightly damp (not wet!), soft cloth. For the rear no cleaning is necessary. For an unscheduled, individual cleaning of the rear the maintenance staff or assembler is self-responsible.

During normal operation no maintenance is necessary. In case of unexpected problems, failures or malfunctions the device must be shipped back to the manufacturer for checking, adjustment and reparation (if necessary). Unauthorized opening and repairing can have negative effects or failures to the protection-measures of the unit.

## 3 Introduction


This series of display unit is suitable for HTL impulse signals and panel mounting. It is very versatile in use, due to the intuitive handling and the extensive range of functions and options.

### 3.1 Operation mode

All functions are can be configured in the parameter menu. The device can be set to one of the following operation modes:


- Operation as frequency display for incremental input signals
  - Measurement of frequency / RMP indicator
  - Tachometers / speed indicator
  - Monitoring functions for speed and standstill
  - Possibility of linking (A+B, B/A, ...) of both channels (e.g., ratio or percentage deviation)
- Operation as position indicator / counter for incremental input signals
  - Pulse counter
  - Up- or down counter
  - Position indicator
  - Protractor
  - Quadrature counter
  - Batch counter / total counter
  - Possibility of linking (A+B, B/A, ...) of both channels (e.g., ratio or percentage deviation)
- Operation as speed- and position indicator for incremental input signals

### 3.2 Function diagram

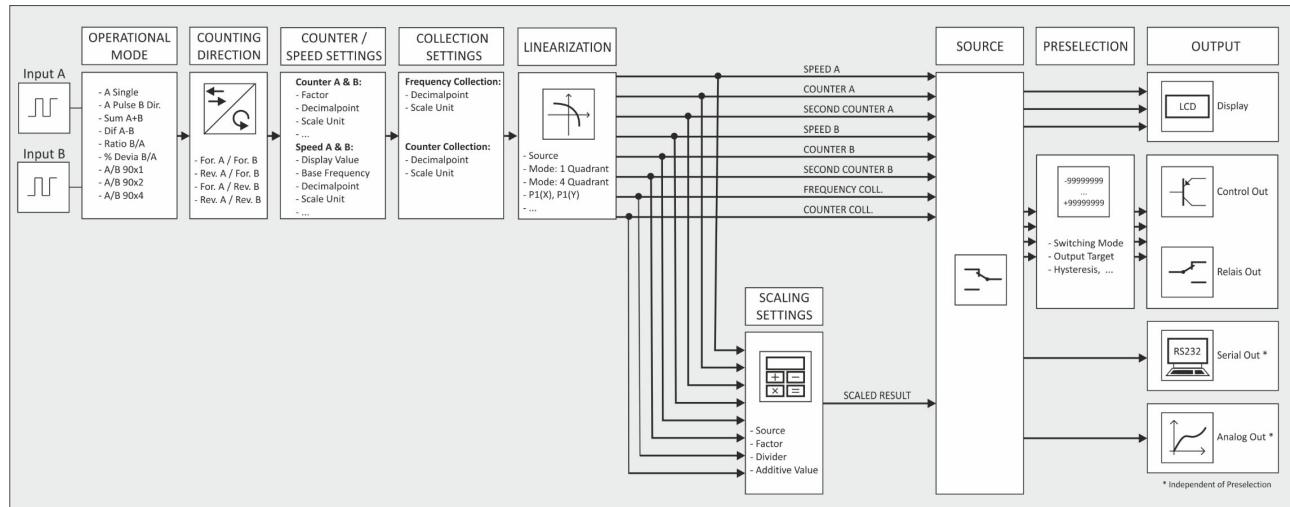

## 4 Electrical Connections

The terminal screws should be tightened with a slotted screwdriver (blade width 2mm).  
DIS-IPDTACCR0000

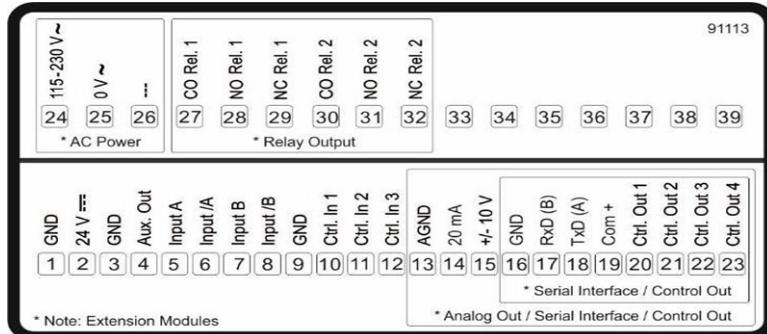

### 4.1 DC Power Supply

The unit accepts DC supply from 18 to 30 V at the terminals 1 and 2. The power consumption depends on the level of the supply voltage with approx. 100 mA and the additional current required at the Auxiliary Voltage Output.

All GND terminals are internally interconnected.

### 4.2 Auxiliary Voltage Output

Terminal 3 and 4 provide an auxiliary output for supply of sensors and encoders. The output voltage depends on the power supply.

DC version	AC version
The encoder voltage is approx. 1 V lower than the power supply voltage at terminal 1 and 2 and should be loaded with max. 250 mA.	The encoder voltage is 24 VDC ( $\pm 15\%$ ) and should be loaded with max. 150 mA up to 45 degrees Celsius. At higher temperature the maximum output current is reduced to 80 mA.


At DIS-IPDTACCR0000 devices, the auxiliary voltages output is switchable from 24 VDC to 5 VDC.

### 4.3 DIS-IPDTACCR0000: Incremental Input A, /A, B, /B

The unit provides two pulse inputs at terminal 5, 6, 7 and 8 for HTL/RS422 signals. The characteristics of the incremental input can be set in the GENERAL MENU.

Wiring of the incremental inputs:


Unconnected PNP inputs are always “LOW” and unconnected NPN inputs are always “HIGH”. All inputs are designed to receive impulses from electrical impulse sources.

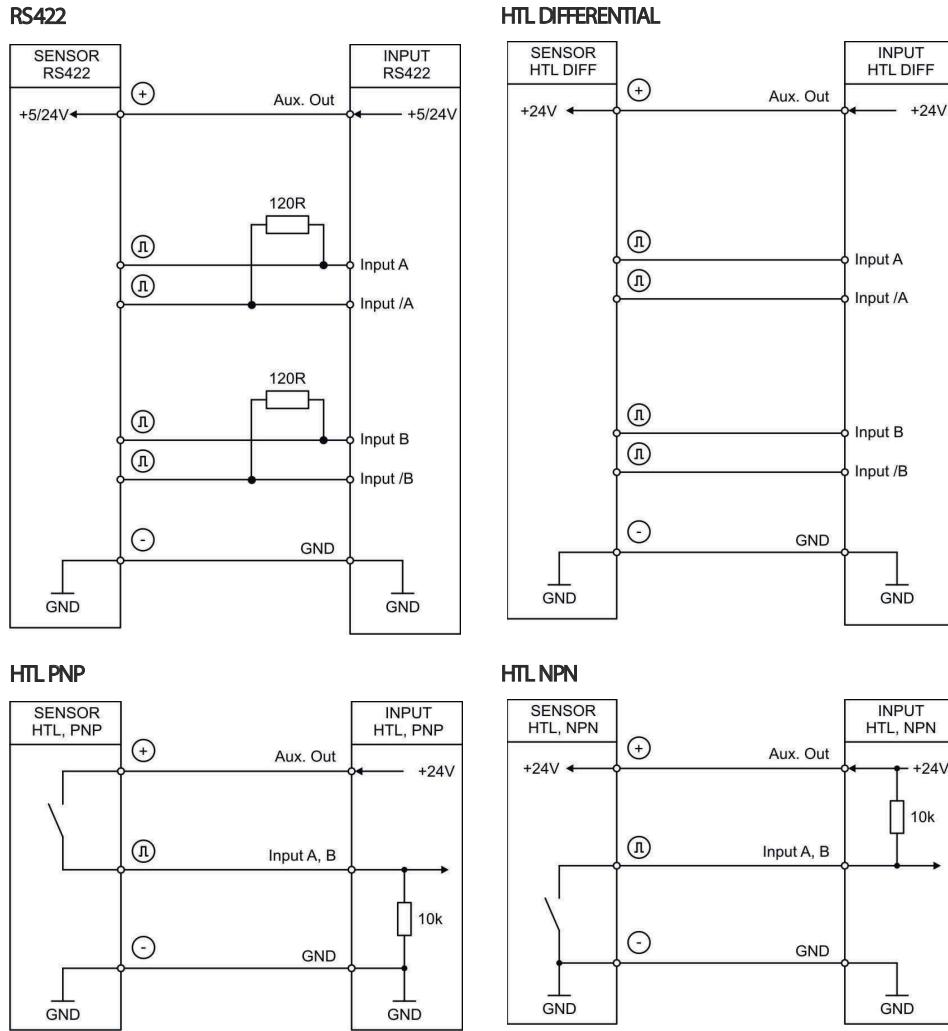

## 4.4 Control Inputs

The three control inputs at terminal 10, 11 and 12 have HTL PNP characteristics. In the COMMAND MENU the programmable functions for the control inputs can be assigned. Available functions are: reset the display value, display switching, locking the touch screen or release the lock function of the control or relay outputs.

Wiring of the control inputs:

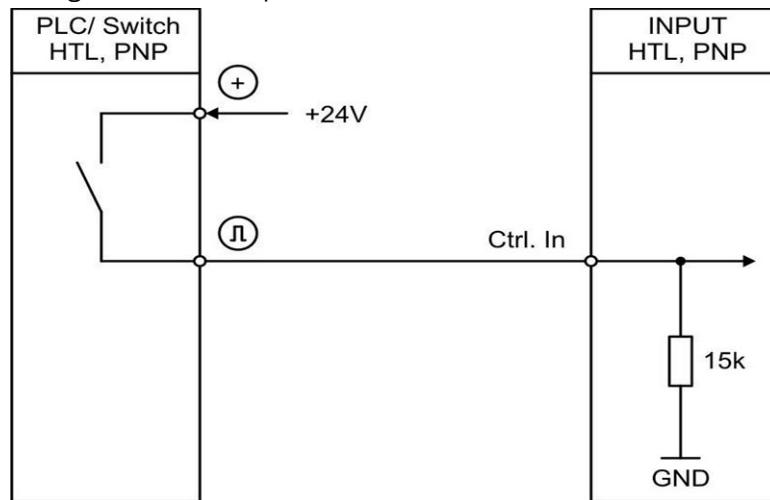

Unconnected control inputs are always “LOW”. All inputs are designed to receive impulses from an electronic impulse source.

### Notice for mechanical switching contacts:

When exceptionally mechanical contacts are used, please connect an external capacitor between GND (-) and the corresponding input (+). A capacity of 10 µF will reduce the input frequency to 20 Hz and miscounting due to contact bouncing will be eliminated.

### 4.5 Serial interface (Option CR)


A serial interface (RS232 or RS485) is available at terminal 16, 17 und 18. This interface can be configured in the SERIAL MENU.

The serial interface RS232 or RS485 can be used:


- for easy setup and commissioning of the units
- to modify settings and parameters during operation
- to read out internal states and actual measuring values by PC or PLC

The following drawing shows the connection to a PC by using a standard Sub-D-9 connector:

Connection of the RS232 interface:

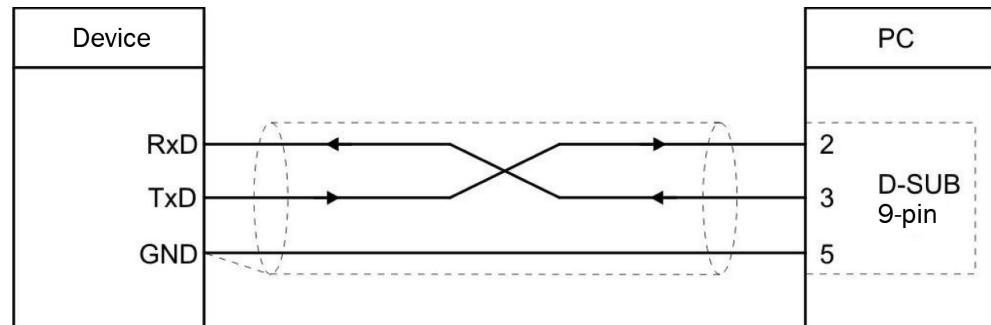

Connection of the RS485 interface:

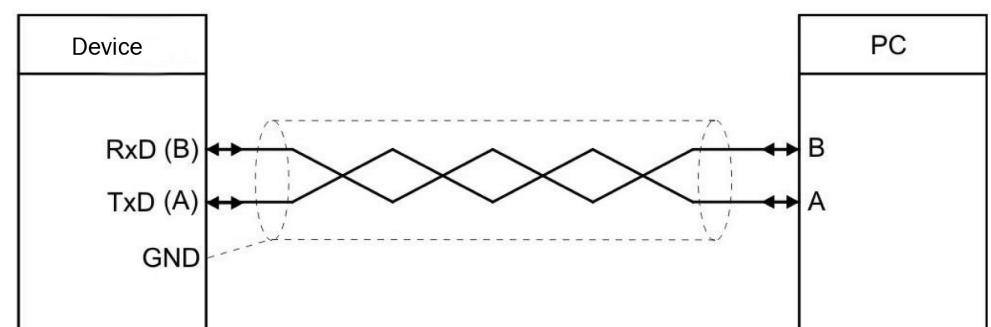


## 4.6 Control-Output CR

Four control outputs are available at terminal 20, 21, 22 and 23. Switching conditions can be set in the PRESELECTION MENU. The output Ctrl. Out1 – 4 are fast PNP outputs with a switching capability of 5 – 30 Volt / 200 mA per channel. The switching states is displayed (display with unit and status bar) as C1 ... C4.

The switching voltage of the outputs must be applied to input terminal 19 (COM+). In case of switching inductive loads it is advisable to use external filtering of the coils.

Wiring of the control-outputs:

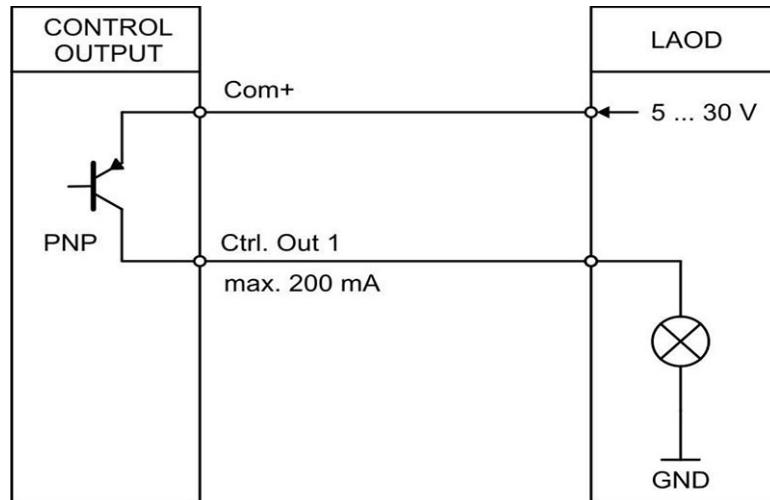

### 5 Display and touch screen

#### 5.1 Screen structure for parametrization

The parameter menus and the parameters are described in chapter 5.

**Start setup procedure:**

To edit the parameters, press the touchscreen for 3 seconds.




**Menu selection:**

Select the parameter menu via arrow buttons and confirm with "OK". The menu selection can be terminated with „C“.



**Parameter selection:**

Select the parameter via arrow buttons and confirm with „OK“. The parameter selection can be terminated with „C“.

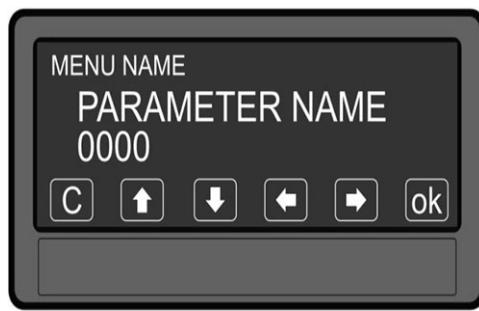

**Parameter editing:**

Edit the parameter via arrow button up and down, shift cursor via left and right and save with „OK“. The parameter editing can be terminated with „C“.



Parameter changes becomes active only after closing the menu selection.

## 5.2 Screen structure in operation

The following screens are available during operation. Depending on the device version and the selected operation mode, not all displays will be shown.

**Display with unit and status bar**

To switch to the next display, press the touch screen.

Control - or Relay status are only shown with option AO, AR, CO, CR or RL.

**Large Display (4 digits)**

To switch to the next display, press the top of the screen.

This is only possible with activated parameter „LARGE DISPLAY“.



### Two-line display without units

To switch to the next display, press the top of the screen.



### Two-line display with units

To switch to the next display, press the top of the screen.



### Display with command keys

To switch to the next display, press the top of the screen.



### Display for quick start for enter or display preselection values

#### PRESELECTION VALUES 1-4)

The desired command key ("Edit Presel." or "Show Presel.") can be set in the display menu via the parameter "QUICKSTART BUTTON". To switch to the next display, press the top of the screen or the "skip" button.

This is only possible with option AO, AR, CO, CR or RL




**Display with minimum and maximum value**

To switch to the next display, press the top of the screen or the "skip" button. The minimum and maximum evaluation refers to the reference source set in the "SOURCE SINGLE" parameter.



### 5.3 Error messages

If a measurement result, which is shown on the display, is outside the displayable display range, an error screen is briefly displayed every two seconds. In this appears, which display value was exceeded or fallen below.

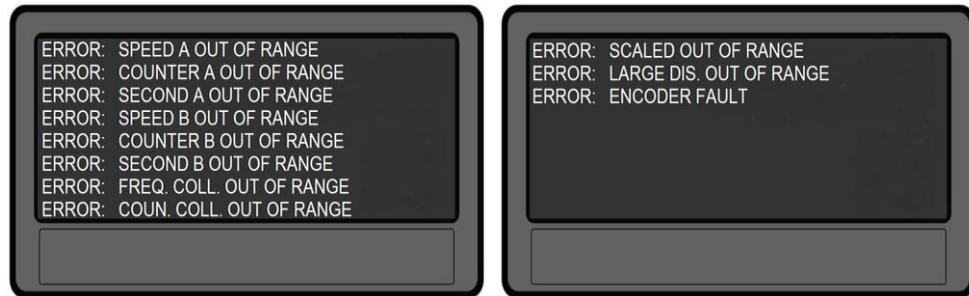**DANGER**

The error messages described are automatically reset as soon as the corresponding display value is within the representable range.

## 6 Parameter / Overview-Menu Structure

The parameterization of the device is realized via the serial interface with a PC and the operating software OS. The link to the free download can be found on page 2. This section provides an overview of the menus and their parameters. The menu names are printed bold and the associated parameters are listed under the menu name. Depending on the device version and the selected operation mode, only the necessary menus / parameters are shown.

Menu / Parameter
<b>GENERAL MENU</b>
OPERATIONAL MODE
ENCODER PROPERTIES
ENCODER SUPPLY
COUNTING DIRECTION
LINEARIZATION MODE
PIN PRESELECTION
PIN PARAMETER
BACK UP MEMORY
FACTORY SETTINGS
<b>SPEED A SETTINGS</b>
DISPLAY VALUE
BASE FREQUENCY
DECIMAL POINT
SAMPLING TIME
WAIT TIME
STANDSTILL TIME
AVERAGE FILTER
SCALE UNITS
<b>SPEED B SETTINGS</b>
DISPLAY VALUE
BASE FREQUENCY
DECIMAL POINT
SAMPLING TIME
WAIT TIME
STANDSTILL TIME
AVERAGE FILTER
SCALE UNITS
<b>COUNTER A SETTINGS</b>
FACTOR
SET VALUE
DECIMAL POINT
SCALE UNITS
SECOND MODE
SECOND SET VALUE
SECOND DECIMAL POINT
SECOND SCALE UNITS
<b>COUNTER B SETTINGS</b>

<b>Menu / Parameter</b>
FACTOR
SET VALUE
DECIMAL POINT
SCALE UNITS
SECOND MODE
SECOND SET VALUE
SECOND DECIMAL POINT
SECOND SCALE UNITS
<b>COLLECTION SETTINGS</b>
DECIMAL POINT FREQUENCY
SCALE UNITS FREQUENCY
DECIMAL POINT COUNTER
SCALE UNITS COUNTER
<b>SCALING SETTINGS</b>
SOURCE
FACTOR
DIVIDER
ADDITIVE VALUE
<b>PRESELECTION VALUES</b>
PRESELECTION 1
PRESELECTION 2
PRESELECTION 3
PRESELECTION 4
<b>PRESELECTION 1 MENU</b>
SOURCE 1
MODE 1
HYSTERESIS 1
PULSE TIME 1
OUTPUT TARGET 1
OUTPUT POLARITY 1
OUTPUT LOCK 1
START UP DELAY 1
EVENT COLOR 1
<b>PRESELECTION 2 MENU</b>
SOURCE 2
MODE 2
HYSTERESIS 2
PULSE TIME 2
OUTPUT TARGET 2
OUTPUT POLARITY 2
OUTPUT LOCK 2
START UP DELAY 2
EVENT COLOR 2
<b>PRESELECTION 3 MENU</b>
SOURCE 3
MODE 3
HYSTERESIS 3
PULSE TIME 3
OUTPUT TARGET 3
OUTPUT POLARITY 3
OUTPUT LOCK 3
START UP DELAY 3
EVENT COLOR 3

Menu / Parameter
<b>PRESELECTION 4 MENU</b>
SOURCE 4 MODE 4 HYSTERESIS 4 PULSE TIME 4 OUTPUT TARGET 4 OUTPUT POLARITY 4 OUTPUT LOCK 4 START UP DELAY 4 EVENT COLOR 4
<b>SERIAL MENU</b>
UNIT NUMBER SERIAL BAUD RATE SERIAL FORMAT SERIAL INIT SERIAL PROTOCOL SERIAL TIMER SERIAL VALUE MODBUS
<b>ANALOG MENU</b>
ANALOG SOURCE ANALOG FORMAT ANALOG START ANALOG END ANALOG GAIN ANALOG OFFSET
<b>COMMAND MENU</b>
INPUT 1 ACTION INPUT 1 CONFIG INPUT 2 ACTION INPUT 2 CONFIG INPUT 3 ACTION INPUT 3 CONFIG
<b>DISPLAY MENU</b>
START DISPLAY SOURCE SINGLE SOURCE DUAL TOP SOURCE DUAL DOWN LARGE DISPLAY COLOR BRIGHTNESS CONTRAST SCREEN SAVER UP-DATE-TIME FONT QUICKSTART BUTTON
<b>LINEARIZATION MENU</b>

Menu / Parameter
SOURCE
P1(X)
P1(Y)
P2(X)
P2(Y)
...
P23(X)
P23(Y)
P24(X)
P24(Y)

## 6.1 General Menu

### OPERATIONAL MODE

This parameter specifies the selected measuring function

0	A SINGLE	Input A is the pulse input. (single-channel measurement)
1	A PULSE B DIR	Input A is the pulse input. Input B determines the direction: for example, "LOW" = forward "HIGH" = backward
2	SUM A+B	Sum: counts impulses A + impulses B and frequency A + frequency B
3	DIF A-B	Difference: counts pulses A - pulses B and frequency A - frequency B
4	RATIO B/A	Ratio: Frequency and counter ratio of both channels (channel B / channel A). Note: Interpretation of the result with 4 decimal places in the format +/- x.xxxx
5	%-DEVIATION B/A	Deviation: percentage deviation from channel B to channel A. Note: Interpretation of the result with 2 decimal places in the format +/- xxx.xx%
6	A/B 90 x1	Up / down counter for pulses with 2x90 ° offset (simple edge evaluation x1)
7	A/B 90 x2	Up / down counter for pulses with 2x90 ° offset (double edge evaluation x1)
8	A/B 90 x4	Up / down counter for pulses with 2x90 ° offset (fourfold edge evaluation x1)

### ENCODER PROPERTIES (for DIS-IPDTACCR0000 )

This parameter determines the characteristics of the pulse input for DIS-IPDTACCR0000.

0	RS422	RS422 standard
1	HTL DIFFERENTIAL	HTL differential
2	HTL PNP	HTL PNP single ended (switch to +)
3	HTL NPN	HTL NPN single ended (switch to -)

### ENCODER SUPPLY (only for DIS-IPDTACCR0000 available)

Dieser Parameter definiert die Ausgangsspannung des Hilfsspannungs-Ausgangs (Aux Out).

0	24VDC SUPPLY	24 VDC encoder supply
1	5VDC SUPPLY	5 VDC encoder supply

### COUNTING DIRECTION

With this parameter the direction of rotation / direction of counting of the pulse inputs (input A and B) can be reversed.

0	FOR. A / FOR. B	Direction of rotation / direction of counting of both pulse inputs (A and B) forward
1	REV. A / REV. B	Direction of rotation / direction of counting of both pulse inputs (A and B) reverse
2	FOR. A / REV. B	Direction of rotation / direction of counting input A forward and input B reverse
3	REV. A / FOR. B	Direction of rotation / direction of counting input A reverse and input B forward

### LINEARIZATION MODE

This parameter defines the linearization function. See chapter 6.1.

0	OFF	No linearization
1	1 QUADRANT	Linearization in the 1. quadrant
2	4 QUADRANT	Linearization in all 4 quadrants

### PIN PRESELECTION

This parameter defines the PIN-code to lock the quick start of the menu PRESELECTION VALUE for entering the preselection values. (Master PIN 6079). This Lock function is only useful in conjunction with active lock function in PIN PARAMETER.

0000	No lock
...	
9999	Access after entering PIN-Code 9999

### PIN PARAMETER

This parameter defines the PIN-code for lock function of all parameters (master PIN 6079).

0000	No lock
...	
9999	Parameterization of the unit after entering PIN-code 9999

### BACK UP MEMORY

0	NO	No back memory –up by power failure
1	YES	Backup memory by power failure, actual value will be saved

### FACTORY SETTINGS

0	NO	No default values are loaded
1	YES	Load default values of all parameters (grey marked default values)

## 6.2 Speed A Settings

In this menu, the settings for a frequency measurement / tachometer on channel A are defined. Depending on the operating mode selected, only input A or input A and input B with 90 ° phase offset are active for forward / reverse direction detection.

### DISPLAY VALUE

Desired value, which should be displayed at the setting of BASE FREQUENCY.

1	Smallest value
1000	Default value
99999999	Highest value

### BASE FREQUENCY (HZ)

Reference frequency for the desired DISPLAY VALUE.

1	Smallest value
100	Default value
500000	Highest value

### DECIMAL POINT

This value defines the position of the decimal point.

0	NO	No decimal point
1	0000000.0	Decimal point at the specified position
2	000000.00	Decimal point at the specified position
3	00000.000	Decimal point at the specified position
4	0000.0000	Decimal point at the specified position
5	000.00000	Decimal point at the specified position
6	00.000000	Decimal point at the specified position
7	0.0000000	Decimal point at the specified position

### SAMPLING TIME (S)

The configured value corresponds to the minimum measurement time. The Parameter is used as a filter in case of irregular frequencies. This parameter directly affects the response time of the unit.

0,005	Shortest Sampling time
0,1	Default value
9,999	Longest Sampling time

$f = \frac{6}{T}$

### WAIT TIME (S)

This parameter defines the period time of the lowest frequency, accordingly the time between two rising signal edges on channel A detecting frequency 0 Hz. Frequencies with a period time higher than the set "WAIT TIME 1" will be detected as frequency = 0 Hz.

0,01	Frequency = 0 Hz, for frequencies below 100 Hz
1,00	Default value
80,00	Frequency = 0 Hz, for frequencies below 0,01 Hz

### STANDBY TIME (S)

This parameter defines the time setting for standstill definition. A time of xx.xx seconds after detection "frequency = 0 Hz" the unit signals "standstill" and reactivates the start-up-delays. Stand still detection can be set in PRESELECT MENU.

0,00	Shortest time
...	
99,99	Largest time

### AVERAGE FILTER

Selectable average or filter function to avoid measuring fluctuations by unstable frequencies. At setting 1 to 4 a floating average calculation is performed. At settings 5 to 8, the device uses an exponential filter. The time constant T (63%) corresponds to the sampling cycles. For example: If SAMPLING TIME = 0,1 s and AVERAGE FILTER = Exponential filter, T (63 %) = 2x SAMPLING TIME, after 0,2 seconds, 63% of the step size are reached.

0	No average value will be created
1	2 numbers of floating average cycles
2	4 numbers of floating average cycles
3	8 numbers of floating average cycles
4	16 numbers of floating average cycles
5	Exponential filter, T (63 %) = 2x SAMPLING TIME
6	Exponential filter, T (63 %) = 4x SAMPLING TIME
7	Exponential filter, T (63 %) = 8x SAMPLING TIME
8	Exponential filter, T (63 %) = 16x SAMPLING TIME

### SCALE UNITS

This parameter defines the required engineering unit. This parameter does not affect the calculation of the display value. The number of decimal places must be defined with the parameter DECIMAL POINT

0	Hz	Default																																																																																																
1	kHz																																																																																																	
2	m/s																																																																																																	
3	m/min																																																																																																	
4	km/h																																																																																																	
5	mph																																																																																																	
6	1/min																																																																																																	
7	RPM																																																																																																	
8	1/sec																																																																																																	
9	RPS																																																																																																	
10	Stk/h																																																																																																	
11	pcs/h																																																																																																	
12	mm																																																																																																	
13	m																																																																																																	
14	inch																																																																																																	
15	feet																																																																																																	
16	Stueck																																																																																																	
17	pcs																																																																																																	
18	sec																																																																																																	
19	min																																																																																																	
20	Min:Sec																																																																																																	
21	H:M:S																																																																																																	
22	Min:Sec:00																																																																																																	
23	l/min																																																																																																	
24	gal/min																																																																																																	
25	ml/min																																																																																																	
26	gr/min																																																																																																	
27	inch/min																																																																																																	
28	%																																																																																																	
29	Edit Unit	<p>A customized unit with up to 16 digits can be edited using this parameter. Pressing the "OK" button opens the Edit Unit Menu. A unit can be created using the arrow keys. (by pressing and holding the arrow keys the characters scroll fast). The "OK" button saves the Edit Unit Menu. The "C" button closes the Edit Unit Menu.</p> <table border="1"> <tr><td></td><td>!</td><td>"</td><td>'</td><td>\$</td><td>%</td><td>&amp;</td><td>'</td><td>(</td><td>)</td><td>*</td><td>+</td><td>,</td><td>-</td><td>.</td><td>/</td></tr> <tr><td>0</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>:</td><td>;</td><td>&lt;</td><td>=</td><td>&gt;</td><td>?</td></tr> <tr><td>@</td><td>A</td><td>B</td><td>C</td><td>D</td><td>E</td><td>F</td><td>G</td><td>H</td><td>I</td><td>J</td><td>K</td><td>L</td><td>M</td><td>N</td><td>O</td></tr> <tr><td>P</td><td>Q</td><td>R</td><td>S</td><td>T</td><td>U</td><td>V</td><td>W</td><td>X</td><td>Y</td><td>Z</td><td>[</td><td>\</td><td>]</td><td>^</td><td>_</td></tr> <tr><td>`</td><td>a</td><td>b</td><td>c</td><td>d</td><td>e</td><td>f</td><td>g</td><td>h</td><td>i</td><td>j</td><td>k</td><td>l</td><td>m</td><td>n</td><td>o</td></tr> <tr><td>p</td><td>q</td><td>r</td><td>s</td><td>t</td><td>u</td><td>v</td><td>w</td><td>x</td><td>y</td><td>z</td><td>{</td><td> </td><td>}</td><td>~</td><td></td></tr> </table>		!	"	'	\$	%	&	'	(	)	*	+	,	-	.	/	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o	p	q	r	s	t	u	v	w	x	y	z	{		}	~	
	!	"	'	\$	%	&	'	(	)	*	+	,	-	.	/																																																																																			
0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	?																																																																																			
@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O																																																																																			
P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	_																																																																																			
`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o																																																																																			
p	q	r	s	t	u	v	w	x	y	z	{		}	~																																																																																				

## 6.3 Speed B Settings

In this menu, the settings for a frequency measurement / tachometer on channel B are defined. This menu is only displayed if the corresponding OPERATIONAL MODE is selected in the GENERAL MENU. (e.g., "SUM A + B", "DIF A-B", "RATIO B / A", or "% DEVIATION B / A")

### DISPLAY VALUE

Desired value, which should be displayed at the setting of BASE FREQUENCY.

1	Smallest value
1000	Default value
99999999	Highest value

### BASE FREQUENCY (HZ)

Reference frequency for the desired DISPLAY VALUE.

1	Smallest value
100	Default value
500000	Highest value

### DECIMAL POINT


This value defines the position of the decimal point.

0	NO	No decimal point
1	0000000.0	Decimal point at the specified position
2	000000.00	Decimal point at the specified position
3	00000.000	Decimal point at the specified position
4	0000.0000	Decimal point at the specified position
5	000.00000	Decimal point at the specified position
6	00.000000	Decimal point at the specified position
7	0.0000000	Decimal point at the specified position

### SAMPLING TIME (S)

The configured value corresponds to the minimum measurement time. The Parameter is used as a filter in case of irregular frequencies. This parameter directly affects the response time of the unit.

0,005	Shortest Sampling time
0,1	Default value
9,999	Longest Sampling time

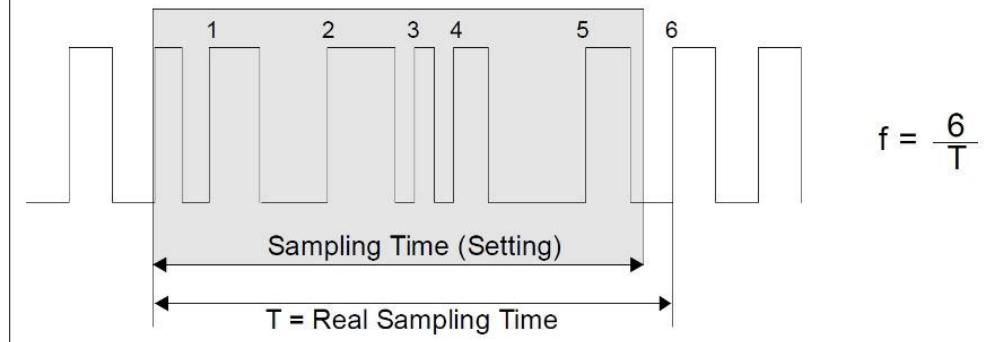

**WAIT TIME (S)**

This parameter defines the period time of the lowest frequency, accordingly the time between two rising signal edges on channel B detecting frequency 0 Hz. Frequencies with a period time higher than the set "WAIT TIME 1" will be detected as frequency = 0 Hz.

0,01	Frequency = 0 Hz, for frequencies below 100 Hz
1,00	Default value
80,00	Frequency = 0 Hz, for frequencies below 0,01 Hz

**STANDSTILL TIME (S)**

This parameter defines the time setting for standstill definition. A time of xx.xx seconds after detection "frequency = 0 Hz" the unit signals "standstill" and reactivates the start-up-delays. Stand still detection can be set in PRESELECT MENU.

0,00	Shortest time
....	
99,99	Largest time

**AVERAGE FILTER**

Selectable average or filter function to avoid measuring fluctuations by unstable frequencies. At setting 1 to 4 a floating average calculation is performed. At settings 5 to 8, the device uses an exponential filter. The time constant T (63%) corresponds to the sampling cycles.

For example: If SAMPLING TIME = 0,1 s and AVERAGE FILTER = Exponential filter, T (63 %) = 2x SAMPLING TIME, after 0,2 seconds, 63% of the step size are reached

0	No average value will be created
1	2 numbers of floating average cycles
2	4 numbers of floating average cycles
3	8 numbers of floating average cycle
4	16 numbers of floating average cycles
5	Exponential filter, T (63 %) = 2x SAMPLING TIME
6	Exponential filter, T (63 %) = 4x SAMPLING TIME
7	Exponential filter, T (63 %) = 8x SAMPLING TIME
8	Exponential filter, T (63 %) = 16x SAMPLING TIME

**SCALE UNITS (display unit of measurement)**

This parameter determines which unit is shown on the display. Setting the SCALE UNITS does not affect the display value. The decimal point is set in the parameter DECIMAL POINT. A list of possible units can be found in "SPEED A SETTINGS - SCALE UNITS".

### 6.4 Counter A Settings

In this menu, the settings for the pulse counter (or position indicator) on channel A are defined.

#### FACTOR

Scaling factor for channel A.

For example: A setting of factor 1.23456 and 100000 input pulses will result in a value of 123456.

0,00001	Smallest value
1	Default value
99,99999	Highest value

#### SET VALUE

In case of a set/reset command (via keys, Control-Inputs or PC-user interface), the counter of channel A is set to the value entered here.

-99999999	Smallest value
0	Default value
+99999999	Highest value

#### DECIMAL POINT

This value defines the position of the decimal point.

0	NO	No decimal point
1	0000000.0	Decimal point at the specified position
2	000000.00	Decimal point at the specified position
3	00000.000	Decimal point at the specified position
4	0000.0000	Decimal point at the specified position
5	000.00000	Decimal point at the specified position
6	00.000000	Decimal point at the specified position
7	0.0000000	Decimal point at the specified position

#### SCALE UNITS

This parameter defines the required engineering unit. This parameter does not affect the calculation of the display value. The number of decimal places must be defined with the parameter DECIMAL POINT

0	Hz
1	kHz
2	m/s
3	m/min
4	km/h
5	mph
6	1/min
7	RPM
8	1/sec
9	RPS
10	Stk/h

11	pcs/h																																																																																											
12	mm	Default																																																																																										
13	m																																																																																											
14	inch																																																																																											
15	feet																																																																																											
16	Stueck																																																																																											
17	pcs																																																																																											
18	sec																																																																																											
19	min																																																																																											
20	Min:Sec																																																																																											
21	H:M:S																																																																																											
22	Min:Sec:00																																																																																											
23	l/min																																																																																											
24	gal/min																																																																																											
25	ml/min																																																																																											
26	gr/min																																																																																											
27	inch/min																																																																																											
28	%																																																																																											
29	Edit Unit	<p>A customized unit with up to 16 digits can be edited using this parameter. Pressing the "OK" button opens the Edit Unit Menu. A unit can be created using the arrow keys. (by pressing and holding the arrow keys the characters scroll fast). The "OK" button saves the Edit Unit Menu. The "C" button closes the Edit Unit Menu.</p> <table border="1"> <tbody> <tr><td>!</td><td>"</td><td>#</td><td>\$</td><td>%</td><td>&amp;</td><td>'</td><td>(</td><td>)</td><td>*</td><td>+</td><td>,</td><td>-</td><td>.</td><td>/</td></tr> <tr><td>0</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td><td>8</td><td>9</td><td>:</td><td>;</td><td>&lt;</td><td>=</td><td>&gt;</td></tr> <tr><td>@</td><td>A</td><td>B</td><td>C</td><td>D</td><td>E</td><td>F</td><td>G</td><td>H</td><td>I</td><td>J</td><td>K</td><td>L</td><td>M</td><td>N</td></tr> <tr><td>P</td><td>Q</td><td>R</td><td>S</td><td>T</td><td>U</td><td>V</td><td>W</td><td>X</td><td>Y</td><td>Z</td><td>[</td><td>\</td><td>]</td><td>^</td></tr> <tr><td>`</td><td>a</td><td>b</td><td>c</td><td>d</td><td>e</td><td>f</td><td>g</td><td>h</td><td>i</td><td>j</td><td>k</td><td>l</td><td>m</td><td>n</td></tr> <tr><td>p</td><td>q</td><td>r</td><td>s</td><td>t</td><td>u</td><td>v</td><td>w</td><td>x</td><td>y</td><td>z</td><td>{</td><td> </td><td>}</td><td>~</td></tr> </tbody> </table>	!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/	0	1	2	3	4	5	6	7	8	9	:	;	<	=	>	@	A	B	C	D	E	F	G	H	I	J	K	L	M	N	P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^	`	a	b	c	d	e	f	g	h	i	j	k	l	m	n	p	q	r	s	t	u	v	w	x	y	z	{		}	~
!	"	#	\$	%	&	'	(	)	*	+	,	-	.	/																																																																														
0	1	2	3	4	5	6	7	8	9	:	;	<	=	>																																																																														
@	A	B	C	D	E	F	G	H	I	J	K	L	M	N																																																																														
P	Q	R	S	T	U	V	W	X	Y	Z	[	\	]	^																																																																														
`	a	b	c	d	e	f	g	h	i	j	k	l	m	n																																																																														
p	q	r	s	t	u	v	w	x	y	z	{		}	~																																																																														

## SECOND MODE

Setting of the batch counter / total counter. The function of batch counting according to a preset value is only possible in combination with the switch condition “automatic reset to zero” (RESULT <= PRES-> 0), “automatic reset to set value” (RESULT>=PRES->VALUE) or “set the counter value to the respective preselection value” (RESULT <=0->SET).

When SECOND MODE is active, PRESELECTION serves as the present value (SOURCE 1-4) for the SECOND COUNTER A.

### Example for the batch counter:

If the batch counter should increment 1 all 1000 pulses, the value e.g. PRESELECTION 1 has to be set to 1000, the related reference source SOURCE 1 to "COUNTER A", the corresponding switching condition MODE 1 to "RESULT>=PRES->0" and SECOND MODE to INCREMENT BATCH. Should an output be turned on after a batch amount of 33, e.g. PRESELECTION 2 has to be set to 33, the related reference source SOURCE 2 to "SECOND COUNTER A" and the switching condition of MODE 2 has to be set to display value greater than or equal (RESULT>=PRES).

### Example for the total counter:

For the total counter, SECOND MODE must be set to "TOTAL COUNTER". The total counter counts here parallel to the main counter. e.g. If the total counter should automatically reset to 0, when 4000 is reached, the preset value e.g. PRESELECTION 3 must be set to "4000", the reference source SOURCE 3 must be set to "SECOND COUNTER A" and the corresponding switching condition MODE 3 must be set to "RESULT> = PRES-> 0".

<b>0</b>	<b>OFF</b>	No batch counter and no total counter
<b>1</b>	<b>INCREMENT BATCH</b>	increment batch counter
<b>2</b>	<b>DECREMENT BATCH</b>	decrement batch counter
<b>3</b>	<b>USE INPUTS ONLY</b>	increment / decrement batch counter only by external commands (see command menu)
<b>4</b>	<b>TOTAL COUNTER</b>	Total counter is activated

### SECOND SET VALUE

With a "RESET / SET" command (command "SET SECOND A" via control input), the Second Counter A (batch counter / total counter) is set to this value. (Parameter only visible with activated "SECOND MODE")

<b>-99999999</b>	Smallest value
<b>0</b>	Default value
<b>+99999999</b>	Highest value

### SECOND DECIMAL POINT

This value defines the position of the decimal point. (Parameter only visible with activated "SECOND MODE")

<b>0</b>	<b>NO</b>	No decimal point
<b>1</b>	<b>0000000.0</b>	Decimal point at the specified position
<b>2</b>	<b>000000.00</b>	Decimal point at the specified position
<b>3</b>	<b>00000.000</b>	Decimal point at the specified position
<b>4</b>	<b>0000.0000</b>	Decimal point at the specified position
<b>5</b>	<b>000.00000</b>	Decimal point at the specified position
<b>6</b>	<b>00.000000</b>	Decimal point at the specified position
<b>7</b>	<b>0.0000000</b>	Decimal point at the specified position

### SECOND SCALE UNITS (display unit of measurement)

This parameter determines which unit is shown on the display. Setting the SCALE UNITS does not affect the display value. The decimal point is set in the parameter SECOND DECIMAL POINT. A list of possible units can be found in "COUNTER A SETTINGS - SCALE UNITS". (Parameter only visible with activated "SECOND MODE")

## 6.5 Counter B Settings

In this menu, the settings for the pulse counter (or position indicator) on channel B are defined. This menu is only displayed when the appropriate OPERATIONAL MODE in the GENERAL MENU is selected (e.g., "SUM A + B", "DIF A-B", "RATIO B / A", or "% DEVIA B / A").

### FACTOR

Scaling factor for channel B.

For example: A setting of factor 1.23456 and 100000 input pulses will result in a value of 123456.

0,00001	Smallest value
1	Default value
99,99999	Highest value

### SET VALUE

In case of a set/reset command (via keys, Control-Inputs or PC-user interface), the counter of channel A is set to the value entered here.

-99999999	Smallest value
0	Default value
+99999999	Highest value

### DECIMAL POINT

This value defines the position of the decimal point.

0	NO	No decimal point
1	0000000.0	Decimal point at the specified position
2	000000.00	Decimal point at the specified position
3	00000.000	Decimal point at the specified position
4	0000.0000	Decimal point at the specified position
5	000.00000	Decimal point at the specified position
6	00.000000	Decimal point at the specified position
7	0.0000000	Decimal point at the specified position

### SCALE UNITS (display unit of measurement)

This parameter determines which unit is shown on the display. Setting the SCALE UNITS does not affect the display value. The decimal point is set in the parameter DECIMAL POINT. A list of possible units can be found in "COUNTER A SETTINGS - SCALE UNITS".

### SECOND MODE

Setting of the batch counter / total counter. The function of batch counting according to a preset value is only possible in combination with the switch condition "automatic reset to zero" (RESULT <= PRES-> 0), "automatic reset to set value" (RESULT>=PRES->VALUE) or "set the counter value to the respective preselection value" (RESULT <=0-> SET).

When SECOND MODE is active, PRESELECTION serves as the present value (SOURCE 1-4) for the SECOND COUNTER B.

**Example for the batch counter:**

If the batch counter should increment 1 all 1000 pulses, the value e.g. PRESELECTION 1 has to be set to 1000, the related reference source SOURCE 1 to "COUNTER B", the corresponding switching condition MODE 1 to "RESULT>=PRES->0" and SECOND MODE to INCREMENT BATCH. Should an output be turned on after a batch amount of 33, e.g. PRESELECTION 2 has to be set to 33, the related reference source SOURCE 2 to "SECOND COUNTER B" and the switching condition of MODE 2 has to be set to display value greater than or equal (RESULT>=PRES).

### Example for the total counter:

For the total counter, SECOND MODE must be set to "TOTAL COUNTER". The total counter counts here parallel to the main counter. e.g. If the total counter should automatically reset to 0, when 4000 is reached, the preset value e.g. PRESELECTION 3 must be set to "4000", the reference source SOURCE 3 must be set to "SECOND COUNTER B" and the corresponding switching condition MODE 3 must be set to "RESULT> = PRES-> 0".

<b>0</b>	<b>OFF</b>	No batch counter and no total counter
<b>1</b>	<b>INCREMENT BATCH</b>	increment batch counter
<b>2</b>	<b>DECREMENT BATCH</b>	decrement batch counter
<b>3</b>	<b>USE INPUTS ONLY</b>	increment / decrement batch counter only by external commands (see command menu)
<b>4</b>	<b>TOTAL COUNTER</b>	Total counter is activated

### SECOND SET VALUE

With a "RESET / SET" command (command "SET SECOND B" via control input), the Second Counter B (batch counter / total counter) is set to this value. (Parameter only visible with activated "SECOND MODE")

-99999999	Smallest value
0	Default value
+99999999	Highest value

### SECOND DECIMAL POINT

This value defines the position of the decimal point. (Parameter only visible with activated "SECOND MODE")

<b>0</b>	<b>NO</b>	No decimal point
<b>1</b>	<b>0000000.0</b>	Decimal point at the specified position
<b>2</b>	<b>000000.00</b>	Decimal point at the specified position
<b>3</b>	<b>00000.000</b>	Decimal point at the specified position
<b>4</b>	<b>0000.0000</b>	Decimal point at the specified position
<b>5</b>	<b>000.00000</b>	Decimal point at the specified position
<b>6</b>	<b>00.000000</b>	Decimal point at the specified position
<b>7</b>	<b>0.0000000</b>	Decimal point at the specified position

### SECOND SCALE UNITS (display unit of measurement)

This parameter determines which unit is shown on the display. Setting the SCALE UNITS does not affect the display value. The number of decimal places must be defined with the parameter SECOND DECIMAL POINT. A list of possible units can be found in "COUNTER A SETTINGS - SCALE UNITS". (Parameter only visible with activated "SECOND MODE")

## 6.6 Collection Settings

In this menu the decimal point as well as the corresponding unit for the linked results ("Frequency Collection" and "Counter Collection") can be set. This menu is only displayed if the corresponding OPERATIONAL MODE is selected in the GENERAL MENU. (e.g., "SUM A + B", "DIF A-B", "RATIO B / A", or "% DEVIATION B / A")

### DECIMAL POINT FREQUENCY

This value defines the position of the decimal point.

<b>0</b>	<b>NO</b>	No decimal point
<b>1</b>	<b>0000000.0</b>	Decimal point at the specified position
<b>2</b>	<b>0000000.00</b>	Decimal point at the specified position
<b>3</b>	<b>00000.000</b>	Decimal point at the specified position
<b>4</b>	<b>0000.0000</b>	Decimal point at the specified position
<b>5</b>	<b>000.00000</b>	Decimal point at the specified position
<b>6</b>	<b>00.000000</b>	Decimal point at the specified position
<b>7</b>	<b>0.0000000</b>	Decimal point at the specified position

### SCALE UNITS FREQUENCY (display unit of measurement)

This parameter determines which unit is shown on the display. Setting the SCALE UNITS does not affect the display value. The decimal point is set in the parameter DECIMAL POINT. A list of possible units can be found in "SPEED A SETTINGS - SCALE UNITS".

### DECIMAL POINT COUNTER

This value defines the position of the decimal point.

<b>0</b>	<b>NO</b>	No decimal point
<b>1</b>	<b>0000000.0</b>	Decimal point at the specified position
<b>2</b>	<b>0000000.00</b>	Decimal point at the specified position
<b>3</b>	<b>00000.000</b>	Decimal point at the specified position
<b>4</b>	<b>0000.0000</b>	Decimal point at the specified position
<b>5</b>	<b>000.00000</b>	Decimal point at the specified position
<b>6</b>	<b>00.000000</b>	Decimal point at the specified position
<b>7</b>	<b>0.0000000</b>	Decimal point at the specified position

### SCALE UNITS COUNTER (display unit of measurement)

This parameter determines which unit is shown on the display. Setting the SCALE UNITS does not affect the display value. The decimal point is set in the parameter DECIMAL POINT. A list of possible units can be found in "SPEED A SETTINGS - SCALE UNITS".

### 6.7 Scaling Settings

In this menu, additional scaling factors can be defined with which the desired process value is additionally calculated again. The correspondingly scaled result is stored in the "SCALED RESULT" and can be selected accordingly for further processing by means of an adjustable reference source. (eg via "Source" parameter for analogue output, switching output, display, ...)

#### SOURCE (reference source)

This parameter defines the reference source, which is additionally calculated with the scaling factors.

0	<b>SPEED A</b>	Result of frequency measurement on channel A (or A / B 90)
1	<b>COUNTER A</b>	Result of the counter on channel A (or A / B 90)
2	<b>SECOND COUNTER A</b>	Result of the second counter (total counter / batch counter) on channel A (or A / B 90) (Only visible if "Second Mode -A" has been activated.)
3	<b>SPEED B</b>	Result of frequency measurement on channel B (Only visible if corresponding "Operational Mode" has been activated.)
4	<b>COUNTER B</b>	Result of the counter on channel B (Only visible if corresponding "Operational Mode" has been activated.)
5	<b>SECOND COUNTER B</b>	Result of the second counter (total counter / batch counter) on channel B (Only visible if "Second Mode -B" has been activated.)
6	<b>FREQUENCY COLL.</b>	Result of the linked frequency of channel A and B (A + B, A-B, B / A, ...) (Only visible if corresponding "Operational Mode" has been activated.)
7	<b>COUNTER COLL.</b>	Result of the linked counters of channel A and B (A + B, A-B, B / A, ...) (Only visible if corresponding "Operational Mode" has been activated.)

#### FACTOR (Multiplikationsfaktor)

This parameter defines the factor

-99999999	Smallest value
1	Default value
99999999	Highest value

#### DIVIDER (Teilungsfaktor)

This parameter defines the divisor.

-99999999	Smallest value
1	Default value
99999999	Highest value

#### ADDITIVE VALUE (Additiver Wert)

This parameter defines an additive constant.

-99999999	Smallest value
0	Default value
99999999	Highest value

## 6.8 Preselection Values

In this menu, the preselection values or switching points are set. The preselection values always refer to the SOURCE selected in the PRESELECTION MENU. This feature is only available on devices with option CO, CR, AO, AR or RL.

### PRESELECTION 1

Preselection / switching point 1

-99999999	Smallest value
1000	Default value
+99999999	Highest value

### PRESELECTION 2

Preselection / switching point 2

-99999999	Smallest value
2000	Default value
+99999999	Highest value

### PRESELECTION 3

Preselection / switching point 3

-99999999	Smallest value
3000	Default value
+99999999	Highest value

### PRESELECTION 4

Preselection / switching point 4

-99999999	Smallest value
4000	Default value
+99999999	Highest value

## 6.9 Preselection 1 Menu

In this menu, the parameters of the reference source, the switching conditions and further definitions for preselection value / switching point 1 are defined.

This function is only available for devices with option CO, CR, AO, AR or RL.

### SOURCE (reference source)

This parameter defines the reference source, which is additionally calculated with the scaling factors

0	<b>SPEED A</b>	Result of frequency measurement on channel A (or A / B 90)
1	<b>COUNTER A</b>	Result of the counter on channel A (or A / B 90)
2	<b>SECOND COUNTER A</b>	Result of the second counter (total counter / batch counter) on channel A (or A / B 90) (Only visible if "Second Mode -A" has been activated.)
3	<b>SPEED B</b>	Result of frequency measurement on channel B (Only visible if corresponding "Operational Mode" has been activated.)
4	<b>COUNTER B</b>	Result of the counter on channel B (Only visible if corresponding "Operational Mode" has been activated.)

<b>5</b>	<b>SECOND COUNTER B</b>	Result of the second counter (total counter / batch counter) on channel B (Only visible if "Second Mode -B" has been activated.)
<b>6</b>	<b>FREQUENCY COLL.</b>	Result of the linked frequency of channel A and B (A + B, A-B, B / A, ...) (Only visible if corresponding "Operational Mode" has been activated.)
<b>7</b>	<b>COUNTER COLL.</b>	Result of the linked counters of channel A and B (A + B, A-B, B / A, ...) (Only visible if corresponding "Operational Mode" has been activated.)
<b>8</b>	<b>SCALED RESULT</b>	Result of the additionally scaled process value

### MODE 1

Switching conditions for preselection 1. Output/ relay/ display switches under the following conditions:

<b>0</b>	<b> RESULT &gt;= PRES </b>	Absolute value of the display value is greater or equal absolute value of PRESELECTION 1 With HYSTERESIS 1 not equal 0 the following switching condition is applied: Display value >= PRESELECTION 1 -> ON, Display value < PRESELECTION 1 - HYSTERESIS 1 -> OFF
<b>1</b>	<b> RESULT &lt;= PRES </b>	Absolute value of the display value is less or equal absolute value of PRESELECTION 1 (start-up suppression (START UP DELAY) is advisable) With HYSTERESIS 1 not equal 0 the following switching condition is applied: Display value <= PRESELECTION 1 -> ON, Display value > PRESELECTION 1 + HYSTERESIS 1 -> OFF
<b>2</b>	<b> RESULT = PRES </b>	Absolute value of the display value is equal absolute value of PRESELECTION 1 A range (Preselection +/- ½ Hysteresis) can be defined and monitored in conjunction with the hysteresis. With HYSTERESIS 1 not equal 0 the following switching condition is applied: Display value > PRESELECTION 1 + ½ HYSTERESIS 1 -> OFF, Display value < PRESELECTION 1 - ½ HYSTERESIS 1 -> OFF
<b>3</b>	<b>RESULT&gt;=PRES</b>	Display value is greater or equal PRESELECTION 1, e.g. overspeed With HYSTERESIS 1 not equal 0 the following switching condition is applied: Display value >= PRESELECTION 1 -> ON, Display value < PRESELECTION 1 - HYSTERESIS 1 -> OFF
<b>4</b>	<b>RESULT&lt;=PRES</b>	Display value is less or equal PRESELECTION 1, e.g. underspeed (start-up suppression "START UP DELAY" is recommend) With HYSTERESIS 1 not equal 0 the following switching condition is applied: Display value <= PRESELECTION 1 -> ON, Display value > PRESELECTION 1 + HYSTERESIS 1 -> OFF
<b>5</b>	<b>RESULT=PRES</b>	Display value is equal PRESELECTION 1. A range (Preselection +/- ½ Hysteresis) can be defined and monitored in conjunction with the hysteresis. With HYSTERESIS 1 not equal 0 the following switching condition is applied: Display value > PRESELECTION 1 + ½ HYSTERESIS 1 -> OFF, Display value < PRESELECTION 1 - ½ HYSTERESIS 1 -> OFF
<b>6</b>	<b>RESULT=0</b>	Display value is zero (Standstill after STANDSTILL TIME(s)), e. g. standstill monitoring (only for reference source SPEED A and SPEED B).

7	<b>RESULT&gt;= PRES-&gt;0</b>	Auto reset to zero: (only for reference sources: COUNTER A, SECOND COUNTER A, COUNTER B and SECOND COUNTER B) Display value is greater or equal PRESELECTION 1, the display value is set to zero. If the BATCH MODE A or B is active, the corresponding batch counter increments or decrements when the display value is set to zero and when the corresponding reference source COUNTER A or COUNTER B was selected.
8	<b>RESULT&lt;= 0-&gt;SET</b>	Auto set to PRESELECTION 1: (only for reference sources: COUNTER A, SECOND COUNTER A, COUNTER B and SECOND COUNTER B) Display value is less or equal zero, the display value is set to PRESELECTION 1. If the BATCH MODE A or B is active, the corresponding batch counter increments or decrements when PRESELECTION 1 is set and when the corresponding reference source COUNTER A or COUNTER B was selected.
9	<b>RES&gt;=PRES-TRAIL</b>	Trailing PRESELECTION 1: Display value is greater or equal PRESELECTION 2 - PRESELECTION 1 -> ON, PRESELECTION 1 is the trailing value from PRESELECTION 2
10	<b>RESULT&gt;= PRES-&gt;VALUE</b>	Set the counter reading to "SET VALUE": (only for reference sources: COUNTER A, SECOND COUNTER A, COUNTER B and SECOND COUNTER B) Display value is greater or equal PRESELECTION 1, the counter reading is set to the corresponding "SET VALUE". If the BATCH MODE A or B is active, the corresponding batch counter increments or decrements when the counter reading is set to the corresponding "SET VALUE" and when the corresponding reference source COUNTER A or COUNTER B was selected.
11	<b>ERROR SET</b>	Error message for device errors

### HYSTERESIS 1

This parameter defines the switching hysteresis of the switch-off point for preselection 1

0	No switching hysteresis
...	
9999	Switching hysteresis of 99999

### PULSE TIME 1 (S)

Duration of output pulse for the switching condition of preselection 1

0,000	No output pulse (static signal)
...	
60,000	Pulse duration of 60 seconds

### OUTPUT TARGET 1

Assignment of an output or relay for the switching condition of preselection 1. If more than one switching condition is assigned to one output / relay, the output is set when at least one switching condition is true.

0	<b>NO</b>	No assignment
1	<b>CTRL OUT 1</b>	Switching condition assigned to "Ctrl. Out 1"
2	<b>CTRL OUT 2</b>	Switching condition assigned to "Ctrl. Out 2"
3	<b>CTRL OUT 3</b>	Switching condition assigned to "Ctrl. Out 3"
4	<b>CTRL OUT 4</b>	Switching condition assigned to "Ctrl. Out 4"
5	<b>RELAY 1</b>	Switching condition assigned to "Rel. 1"
6	<b>RELAY 2</b>	Switching condition assigned to "Rel. 2"

### OUTPUT POLARITY 1

Polarity for the switching condition of preselection 1

<b>0</b>	<b>ACTIVE HIGH</b>	Switching condition is true -> Active „HIGH“
<b>1</b>	<b>ACTIVE LOW</b>	Switching condition is true -> Active „LOW“

### OUTPUT LOCK 1

Latch for the switching condition of preselection 1

<b>0</b>	<b>NO</b>	No latch for preselection
<b>1</b>	<b>YES</b>	Latch for preselection (command LOCK RELEASE will clear latch)

### START UP DELAY 1 (S)

Start-up suppression for the switching condition of preselection 1. This adjustment is only valid for the switching condition  $|RESULT| \leq |PRES|$  or  $RESULT \leq PRES$  and only for reference sources “SPEED A” and “SPEED B”. (Start Up Delay 3 and 4 have an automatic start up suppression).

<b>0.000</b>	No start-up suppression
...	
<b>60.000</b>	Start-up suppression in seconds

### EVENT COLOR 1

Event-depending change of the display color for the switching condition of preselection 1. EVENT COLOR 1 has the lowest priority. EVENT COLOR 2 ... 4 are allowed to overwrite this color change.

<b>0</b>	<b>NO CHANGE</b>	No color change.
<b>1</b>	<b>CHANGE TO RED</b>	Color change to red
<b>2</b>	<b>CHANGE TO GREEN</b>	Color change to green
<b>3</b>	<b>CHANGE TO YELLOW</b>	Color change to yellow

## 6.10 Preselection 2 Menu

### SOURCE 2

The reference source for PRESELECTION 2, see PRESELECTION 1 MENU.

### MODE 2

Switching conditions for preselection 2. Output/ relay/ display switches under the following conditions:

		See chapter PRESELECTION 1 MENU
<b>9</b>	<b>RES&gt;=PRES-TRAIL</b>	Display value is greater or equal to PRESELECTION 1 – PRESELECTION 2 -> ON, is the trailing preselection from PRESELECTION 1.

### HYSTERESIS 2

This parameter defines the switching hysteresis of the switch-off point for preselection 2. See chapter PRESELECTION 1 MENU.

### PULSE TIME 2 (S)

Duration of output pulse for the switching condition of preselection 2. See chapter PRESELECTION 1 MENU.

**OUTPUT TARGET 2**

Assignment of an output or relay for the switching condition of preselection 2. See chapter PRESELECTION 1 MENU.

**OUTPUT POLARITY 2**

Polarity for the switching condition of preselection 2. See chapter PRESELECTION 1 MENU.

**OUTPUT LOCK 2**

Latch for the switching condition of preselection 2. See chapter PRESELECTION 1 MENU.

**START UP DELAY 2 (S)**

Start-up suppression for the switching condition of preselection 2. See chapter PRESELECTION 1 MENU. (Start Up Delay 3 and 4 have an automatic start up suppression).

**EVENT COLOR 2**

Event-depending change of the display color for the switching condition of preselection 2. See chapter PRESELECTION 1 MENU.

## 6.11 Preselection 3 Menu

**SOURCE 3**

The reference source for PRESELECTION 3, see PRESELECTION 1 MENU.

**MODE 3**

Switching conditions for preselection 3. Output/ relay/ display switches under the following conditions:

		See chapter PRESELECTION 1 MENU
9	<b>RES&gt;=PRES-TRAIL</b>	Trailing preselection 3: Display value is greater or equal to PRESELECTION 4 - PRESELECTION 3 -> ON, PRESELECTION 3 is the trailing preselection from PRESELECTION 4.

**HYSTERESIS 3**

This parameter defines the switching hysteresis of the switch-off point for preselection 3. See chapter PRESELECTION 1 MENU.

**PULSE TIME 3 (S)**

Duration of output pulse for the switching condition of preselection 3. See chapter PRESELECTION 1 MENU.

**OUTPUT TARGET 3**

Assignment of an output or relay for the switching condition of preselection 3. See chapter PRESELECTION 1 MENU.

**OUTPUT POLARITY 3**

Polarity for the switching condition of preselection 3. See chapter PRESELECTION 1 MENU.

### OUTPUT LOCK 3

Latch for the switching condition of preselection 3. See chapter PRESELECTION 1 MENU.

### START UP DELAY 3

Start-up suppression for the switching condition of preselection 3. This adjustment is only valid for the switching condition  $|RESULT| \leq |PRES|$  or  $RESULT \leq PRES$  and only for reference sources "SPEED A" and "SPEED B".

<b>0</b>	<b>OFF</b>	No start-up suppression
<b>1</b>	<b>AUTO</b>	Automatic start up suppression, until the preselection value / switching point is exceeded for the first time.

### EVENT COLOR 3

Event-depending change of the display color for the switching condition of preselection 3. See chapter PRESELECTION 1 MENU.

## 6.12 Preselection 4 Menu

### SOURCE 4

The reference source for PRESELECTION 4, see PRESELECTION 1 MENU.

### MODE 4

Switching conditions for preselection 4. Output/ relay/ display switches under the following conditions:

		See chapter PRESELECTION 1 MENU
<b>9</b>	<b>RES&gt;=PRES-TRAIL</b>	Trailing preselection 4: Display value is greater or equal to PRESELECTION 3 – PRESELECTION 4 -> ON, PRESELECTION 4 is the trailing preselection from PRESELECTION 3

### HYSTERESIS 4

This parameter defines the switching hysteresis of the switch-off point for preselection 4. See chapter PRESELECTION 1 MENU.

### PULSE TIME 4 (S)

Duration of output pulse for the switching condition of preselection 3. See chapter PRESELECTION 1 MENU.

### OUTPUT TARGET 4

Assignment of an output or relay for the switching condition of preselection 4. See chapter PRESELECTION 1 MENU.

### OUTPUT POLARITY 4

Polarity for the switching condition of preselection 4. See chapter PRESELECTION 1 MENU.

### OUTPUT LOCK 4

Latch for the switching condition of preselection 4. See chapter PRESELECTION 1 MENU.

**START UP DELAY 4**

Start-up suppression for the switching condition of preselection 4. This adjustment is only valid for the switching condition  $|RESULT| \leq |PRES|$  or  $RESULT \leq PRES$  and mode SPPED and PROCESS TIME. (Start Up Delay 1 and 2 have a time-dependent start up suppression).

<b>0</b>	<b>OFF</b>	No start-up suppression
<b>1</b>	<b>AUTO</b>	Automatic start up suppression, until the preselection value / switching point is exceeded for the first time.

**EVENT COLOR 4**

Event-depending change of the display color for the switching condition of preselection 4. See chapter PRESELECTION 1 MENU.

### 6.13 Serial Menu

This menu defines the basic settings of serial interface. This function is only available for devices with option CO, CR, AO or AR.

#### UNIT NUMBER

This parameter defines serial device addresses. The addresses between 11 and 99 can be assigned to the devices. Addresses with zero are not allowed, there are used as broadcast addresses.

11	Smallest address
...	
99	Highest address

#### SERIAL BAUD RATE

This parameter defines the serial baud rate.

0	9600	9600 baud
1	19200	19200 baud
2	38400	38400 baud

#### SERIAL FORMAT

This parameter defines the bit data format.

0	7-EVEN-1	7 data	Parity even	1 Stop
1	7-EVEN-2	7 data	Parity even	2 Stops
2	7-ODD-1	7 data	Parity odd	1 Stop
3	7-ODD-2	7 data	Parity odd	2 Stops
4	7-NONE-1	7 data	no Parity	1 Stop
5	7-NONE-2	7 data	no Parity	2 Stops
6	8-EVEN-1	8 data	Parity even	1 Stop
7	8-ODD-1	8 data	Parity odd	1 Stop
8	8-NONE-1	8 data	no Parity	1 Stop
9	8-NONE-2	8 data	no Parity	2 Stops

#### SERIAL INIT

This parameter defines the baud rate for the initialization to the user interface OS. With settings larger than 9600 the initialization time can be reduced.

0	NO	Initialization with 9600 baud. Then the device operates with the value selected by the user.
1	YES	Initialization with the baud rate set by SERIAL BAUD RATE. Then the device operates with the value selected by the user.

#### SERIAL PROTOCOL

Determines the sequence of characters send, when using the serial output for cyclic data transmission under time control (xxxxxx = value SERIAL VALUE). Setting „1“ removes the unit address from the string which allows a slight faster transmission cycle.

0	Transmission report = Unit Nr., +/-, data, LF, CR
	1 1 +/- X X X X X X X X LF CR

<b>1</b>	Transmission report = +/-, data, LF, CR
	[               +/-   X   X   X   X   X   X   X   LF   CR ]

**SERIAL TIMER (S)**

This register determines the cycle time in seconds for cycling transmission of SERIAL VALUE when using the serial output. (On a serial request, the cycling transmission is stopped for 20 s)

<b>0,000</b>	All cyclic transmission is switched off. The unit will send data upon a serial request or with command SERIAL PRINT.
...	
<b>60,000</b>	Cycle time in seconds.

**SERIAL VALUE**

This parameter defines the value to be transmitted.

Einstellung	Code	Bedeutung
<b>0</b>	:0	Measurement_Result
<b>1</b>	:1	Speed_Value
<b>2</b>	:2	Time_Result
<b>3</b>	:3	Counter_A
<b>4</b>	:4	Velocity_Speed
<b>5</b>	:5	Batch_Counter
<b>6</b>	:6	Minimal_Value
<b>7</b>	:7	Maximal_Value
<b>8</b>	:8	Counter_Total
<b>9</b>	:9	Time_Result_Total

**MODBUS**

This parameter enables the Modbus protocol and determines the Modbus address. For details of the Modbus communication please refer to the additional manual Modbus\_RTU

<b>0</b>	Modbus disabled Serial interface is using Lecom protocol (Motrona default protocol)
<b>1 ... 247</b>	Modbus enabled: Serial interface is using Modbus RTU protocol The set value is the Modbus address of the device.

**6.14 Analog Menu****ANALOG GAIN (%)**

This parameter specifies the maximum conversion of the analog output in %.

e. g. 102.00 corresponds to a conversion of 10.2 V or 20.4 mA, when the ANALOG END value is reached. e. g. 95.00 corresponds to a conversion of 9.5 V or 18 mA, when the ANALOG END value is reached.

<b>0,00</b>	Smallest gain
<b>100,00</b>	Default value
<b>110,00</b>	Highest gain

### ANALOG OFFSET (%)

This parameter sets the zero offset of the output.

e.g. 0.20 result in an offset of 0.02 V or 0.04 mA at ANALOG START value

-99,99	Smallest zero offset
0	Default value
+99,00	Highest zero offset

## 6.15 Command Menu

### INPUT 1 ACTION (function Input 1)

This parameter defines the function of the input “Ctrl. In 1”.

0	NO	No function.	
1	RESET/SET A+B	Reset / set the counter reading of channel A and. B to the value set in "SET VALUE".	(d) (s)
2	FREEZE	Freeze actual display value	(s)
3	KEY LOCK	disable touch screen	(s)
4	LOCK RELEASE	Loosen locking of all outputs / relay	(d)
5	RESET MIN/MAX	Reset of the min. / max. values	(d) (s)
6	SERIAL PRINT	Sending of serial data, see parameter SERIAL VALUE	(d)
7	TEACH PRESEL. 1	Current display value is stored as PRESELECTION 1 (reference source is the one-line display)	(d)
8	TEACH PRESEL. 2	Current display value is stored as PRESELECTION 2 (reference source is the one-line display)	(d)
9	TEACH PRESEL. 3	Current display value is stored as PRESELECTION 3 (reference source is the one-line display)	(d)
10	TEACH PRESEL. 4	Current display value is stored as PRESELECTION 4 (reference source is the one-line display)	(d)
11	SCROLL DISPLAY	Display switching (see display in operation mode)	(d)
12	CLEAR LOOP TIME	N.A.	
13	START PRESELECT	N.A.	
14	ACTIVATE	N.A.	
15	STORE DATA	N.A.	
16	TESTPROGRAM	N.A.	
17	SET RED COLOR	The display lights up red. The color can be changed by the event-dependent color switching in the PRESELECTION 1... 4	(d)
18	SET GREEN COLOR	The display lights up green. The color can be changed by the event-dependent color switching in the PRESELECTION 1... 4	(d)
19	SET YELLOW COLOR	The display lights up yellow. The color can be changed by the event-dependent color switching in the PRESELECTION 1... 4	(d)
20	RESET/SET A	Reset /set the value of counter from channel A to the set value in "Counter A Settings – SET VALUE"	(d) (s)
21	RESET/SET B	Reset /set the value of counter from channel B to the set value in "Counter B Settings – SET VALUE"	(d) (s)

<b>22</b>	<b>SET SECOND A</b>	Reset / set of the batch counter / total counter from channel A to the set value in “Counter A Settings – SECOND SET VALUE”	(d) (s)
<b>23</b>	<b>SET SECOND B</b>	Reset / set of the batch counter / total counter from channel B to the set value in “Counter B Settings – SECOND SET VALUE”	(d) (s)
<b>24</b>	<b>INC. BATCH A</b>	Increase the batch counter of channel A	(d)
<b>25</b>	<b>DEC. BATCH A</b>	Decrease of the batch counter of channel A	(d)
<b>26</b>	<b>INC. BATCH B</b>	Increase the batch counter of channel B	(d)
<b>27</b>	<b>DEC. BATCH B</b>	Decrease of the batch counter of channel B	(d)
<b>28</b>	<b>INC. BRIGHTNESS</b>	Display brightness is increased	(d) (s)
<b>29</b>	<b>DEC. BRIGHTNESS</b>	Display brightness is reduced	(d) (s)
<b>30</b>	<b>LOCK COUNTER A</b>	Counter (channel A) is disabled and stops counting any further pulses as long as this command is present.	(s)
<b>31</b>	<b>LOCK COUNTER B</b>	Counter (channel B) is disabled and stops counting any further pulses as long as this command is present.	(s)

(s) = static switching (level evaluation) INPUT CONFIG must be set to active LOW / HIGH

(d) = dynamic switching (edge evaluation) INPUT CONFIG must be set to RISING/FALLING EDGE

### INPUT 1 CONFIG

This parameter defines the switching characteristics of the input “Ctrl. In 1”.

<b>0</b>	<b>ACTIVE LOW</b>	Active at „LOW“ (static)
<b>1</b>	<b>ACTIVE HIGH</b>	Active at „HIGH“ (static)
<b>2</b>	<b>RISING EDGE</b>	Activate at rising edge
<b>3</b>	<b>FALLING EDGE</b>	Activate at falling edge

### INPUT 2 ACTION

This parameter defines the function of the input “Ctrl. In 2”. See parameter INPUT 1 ACTION.

### INPUT 2 CONFIG

This parameter defines the switching characteristics of the input “Ctrl. In 2”. See parameter INPUT 1 CONFIG.

### INPUT 3 ACTION

This parameter defines the function of the input “Ctrl. In 3”. See parameter INPUT 1 ACTION.

### INPUT 3 CONFIG

This parameter defines the switching characteristics of the input “Ctrl. In 3”. See parameter INPUT 1 CONFIG.

## 6.16 Display Menu

Parameter changes become active only after closing the menu selection.

### START DISPLAY

This parameter defines the start display after switching on device.

<b>0</b>	<b>STANDARD</b>	Display with unit and status bar
<b>1</b>	<b>LARGE</b>	Large display (only the parameter „LARGE DISPLAY“ is active)
<b>2</b>	<b>DOUBLE</b>	Two-line display without units
<b>3</b>	<b>DOUBLE WITH UNITS</b>	Two-line display with units
<b>4</b>	<b>COMMAND</b>	Display with command keys
<b>5</b>	<b>QUICKSTART</b>	Display for quick start for enter / display preselection values (only for option CO/CR/AO/AR/RL)
<b>6</b>	<b>MINIMUM/MAXIMUM</b>	Display with minimum and maximum value

### SOURCE SINGLE

(Reference source for single-line display and large display)

<b>0</b>	<b>SPEED A</b>	Result of frequency measurement on channel A (or A / B 90)
<b>1</b>	<b>COUNTER A</b>	Result of the counter on channel A (or A / B 90)
<b>2</b>	<b>SECOND COUNTER A</b>	Result of the second counter (total counter / batch counter) on channel A (or A / B 90) (Only visible if "Second Mode -A" has been activated.)
<b>3</b>	<b>SPEED B</b>	Result of frequency measurement on channel B (Only visible if corresponding "Operational Mode" has been activated.)
<b>4</b>	<b>COUNTER B</b>	Result of the counter on channel B (Only visible if corresponding "Operational Mode" has been activated.)
<b>5</b>	<b>SECOND COUNTER B</b>	Result of the second counter (total counter / batch counter) on channel B (or A / B 90) (Only visible if "Second Mode -B" has been activated.)
<b>6</b>	<b>FREQUENCY COLL.</b>	Result of the linked frequency of channel A and B (A+B, A-B, B/A, ...) (Only visible if corresponding "Operational Mode" has been activated.)
<b>7</b>	<b>COUNTER COLL.</b>	Result of the linked counter of channel A and B (A+B, A-B, B/A, ...) (Only visible if corresponding "Operational Mode" has been activated.)
<b>8</b>	<b>SCALED RESULT</b>	Result of the additionally scaled process value

### SOURCE DUAL TOP

(Reference source for two-line display, first line)

<b>0</b>	<b>SPEED A</b>	Result of frequency measurement on channel A (or A / B 90)
<b>1</b>	<b>COUNTER A</b>	Result of the counter on channel A (or A / B 90)
<b>2</b>	<b>SECOND COUNTER A</b>	Result of the second counter (total counter / batch counter) on channel A (or A / B 90) (Only visible if "Second Mode -A" has been activated.)
<b>3</b>	<b>SPEED B</b>	Result of frequency measurement on channel B (Only visible if corresponding "Operational Mode" has been activated.)
<b>4</b>	<b>COUNTER B</b>	Result of the counter on channel B (Only visible if corresponding "Operational Mode" has been activated.)
<b>5</b>	<b>SECOND COUNTER B</b>	Result of the second counter (total counter / batch counter) on channel B (or A / B 90) (Only visible if "Second Mode -B" has been activated.)
<b>6</b>	<b>FREQUENCY COLL.</b>	Result of the linked frequency of channel A and B (A+B, A-B, B/A, ...) (Only visible if corresponding "Operational Mode" has been activated.)
<b>7</b>	<b>COUNTER COLL.</b>	Result of the linked counter of channel A and B (A+B, A-B, B/A, ...) (Only visible if corresponding "Operational Mode" has been activated.)

<b>8</b>	<b>SCALED RESULT</b>	Result of the additionally scaled process value
----------	----------------------	---

**SOURCE DUAL DOWN**

(Reference source for two-line display, second line)

<b>0</b>	<b>SPEED A</b>	Result of frequency measurement on channel A (or A / B 90)
<b>1</b>	<b>COUNTER A</b>	Result of the counter on channel A (or A / B 90)
<b>2</b>	<b>SECOND COUNTER A</b>	Result of the second counter (total counter / batch counter) on channel A (or A / B 90) (Only visible if "Second Mode -A" has been activated.)
<b>3</b>	<b>SPEED B</b>	Result of frequency measurement on channel B (Only visible if corresponding "Operational Mode" has been activated.)
<b>4</b>	<b>COUNTER B</b>	Result of the counter on channel B (Only visible if corresponding "Operational Mode" has been activated.)
<b>5</b>	<b>SECOND COUNTER B</b>	Result of the second counter (total counter / batch counter) on channel B (or A / B 90) (Only visible if "Second Mode -B" has been activated.)
<b>6</b>	<b>FREQUENCY COLL.</b>	Result of the linked frequency of channel A and B (A+B, A-B, B/A, ...) (Only visible if corresponding "Operational Mode" has been activated.)
<b>7</b>	<b>COUNTER COLL</b>	Result of the linked counter of channel A and B (A+B, A-B, B/A, ...) (Only visible if corresponding "Operational Mode" has been activated.)
<b>8</b>	<b>SCALED RESULT</b>	Result of the additionally scaled process value

**LARGE DISPLAY**

This parameter defines to switch on / off the large display. By splitting ratio the display value for the large display can be divided. (Reference source for the large display is the set process value in the "SOURCE SINGLE" parameter.)

<b>0</b>	<b>NO</b>	Large display off
<b>1</b>	<b>1:1</b>	Large display with splitting ratio 1:1
<b>2</b>	<b>1:10</b>	Large display with splitting ratio 1:10
<b>3</b>	<b>1:100</b>	Large display with splitting ratio 1:100
<b>4</b>	<b>1:1000</b>	Large display with splitting ratio 1:1000
<b>5</b>	<b>1:10000</b>	Large display with splitting ratio 1:10000

**COLOR**

This parameter defines the display color. Event-depending change of the display color by a switching condition is possible (see PRESELECTION 1...4 MENU) Event-depending changes are only available for devices with option CO, CR, AO, AR or RL.

<b>0</b>	<b>RED</b>	Red display
<b>1</b>	<b>GREEN</b>	Green display
<b>2</b>	<b>YELLOW</b>	Yellow display

**BRIGHTNESS (%)**

This parameter defines the brightness of the display in percent

<b>10</b>	Min. brightness
<b>90</b>	Default value
<b>100</b>	Max. brightness

### CONTRAST

This parameter defines the viewing angle.

<b>0</b>	Viewing angle from top
<b>1</b>	Viewing angle from center
<b>2</b>	Viewing angle from bottom

### SCREEN SAVER (S)

This parameter defines the time in seconds until the display is switched off, after the last touch action. A new touch action will activate the display again.

<b>0</b>	No switch off
...	
<b>9999</b>	Longest time to switch off

### UP-DATE-TIME (S)

This parameter defines the update time in seconds of the display only.

<b>0,005</b>	Shortest update time
<b>0,1</b>	Default value
<b>9,999</b>	Longest update time

### FONT

This parameter defines the setting of the font style.

<b>0</b>	Standard
<b>1</b>	Font 1

### QUICKSTART BUTTON

This parameter determines which command key should be displayed on the "Quick Start"-display. (Parameter only visible with option CO/CR/AO/AR/RL).

<b>0</b>	<b>EDIT PRESEL.</b>	Editing menu is opened after pressing the left command key and "Preselection Values" can be changed. Attention: Monitoring of the switching outputs, correction of the analogue output etc. are deactivated as long as the editing menu is open!
<b>1</b>	<b>SHOW PRESEL.</b>	Set "Preselection Values" are displayed on the screen after pressing the left-hand button. The editing menu will not be opened. The monitoring of the switching outputs, the correction of the analog output etc. are still activated.

## 6.17 Linearization Menu

The linearization function is defined in this menu. This menu will only be showed, if the LINEARIZATION MODE in GENERAL MENU is selected.

Linearization description and examples are shown in the appendix.

### SOURCE

(Reference source for single-line display and large display)

<b>0</b>	<b>SPEED A</b>	Result of frequency measurement on channel A (or A / B 90)
<b>1</b>	<b>COUNTER A</b>	Result of the counter on channel A (or A / B 90)

<b>2</b>	<b>SECOND COUNTER A</b>	Result of the second counter (total counter / batch counter) on channel A (or A / B 90) (Only visible if "Second Mode -A" has been activated.)
<b>3</b>	<b>SPEED B</b>	Result of frequency measurement on channel B (Only visible if corresponding "Operational Mode" has been activated.)
<b>4</b>	<b>COUNTER B</b>	Result of the counter on channel B (Only visible if corresponding "Operational Mode" has been activated.)
<b>5</b>	<b>SECOND COUNTER B</b>	Result of the second counter (total counter / batch counter) on channel B (or A / B 90) (Only visible if "Second Mode -B" has been activated.)
<b>6</b>	<b>FREQUENCY COLL.</b>	Result of the linked frequency of channel A and B (A+B, A-B, B/A, ...) (Only visible if corresponding "Operational Mode" has been activated.)
<b>7</b>	<b>COUNTER COLL.</b>	Result of the linked counter of channel A and B (A+B, A-B, B/A, ...) (Only visible if corresponding "Operational Mode" has been activated.)
<b>8</b>	<b>SCALED RESULT</b>	Result of the additionally scaled process value

**P1(X) ... P24(X)**

X-coordinate of the linearization point. This value representing the display value which the unit show in the display without linearization.

<b>-99999999</b>	Smallest X-coordinate
<b>0</b>	Default value
<b>+99999999</b>	Largest X-coordinate

**P1(Y) ... P24(Y)**

Y-coordinate of the linearization point. This is the display value, which the unit should show in the display with linearization.

E.g. P2(X) is replaced by P2(Y).

<b>-99999999</b>	Smallest X-coordinate
<b>0</b>	Default value
<b>+99999999</b>	Largest X-coordinate

## 7 Appendix

### 7.1 Data readout via serial interface

The free operator software OS is available at:

<https://www.motrona.com/en/support/software.html>

All codes shown in the parameter SERIAL VALUE are available for serial readout by PC or PLC. The communication of Motrona devices is based on the Drivecom protocol according to ISO 1745 or the Modbus RTU protocol. All protocol details can be found in our manual SERPRO (Drivecom) which is available for download from our homepage www.motrona.com and in the chapter "Modbus RTU Interface" in this manual.

**To request for a data transmission you must send the following request string to the converter:**

EOT	AD1	AD2	C1	C2	ENQ
-----	-----	-----	----	----	-----

EOT = control character (Hex 04)

AD1 = unit address, High Byte

AD2 = unit address, Low Byte

C1 = register code, High Byte

C2 = register code, Low Byte

ENQ = control character (Hex 05)

The following example shows the request string for readout of the actual input frequency of a monitor (Code=1) from a unit with unit address 11:

ASCII-Code:	EOT	1	1	:	1	ENQ
Hex-Code:	04	31	31	3A	31	05
Binary-Code:	0000 0100	0011 0001	0011 0001	0011 1010	0011 0001	0000 0101

**After a correct request, the unit will respond:**

STX	C1	C2	xxxxx	ETX	BCC
-----	----	----	-------	-----	-----

STX = control character (Hex 02)

C1 = register code, High Byte

C2 = register code, Low Byte

xxxxx = readout data

ETX = control character (Hex 03)

BCC = block check character

### 7.2 Modbus RTU Interface

The Modbus interface of the touchMatrix® series is a standard Modbus RTU Slave and provides the following Modbus functions:

- Read Coils
- Write Single Coil
- Read Holding Registers
- Write Multiple Registers
- Diagnosis

For the operation of the interface module and the understanding of this manual basic knowledge in Modbus RTU communication is presupposed.

### 7.2.1 Parameter setting

Required parameter settings in MX350 / MX355 “Serial menu”:

#### UNIT NUMBER

Not valid for Modbus communication

(For setting of Modbus address see parameter “MODBUS”)

#### SERIAL BAUD RATE

This parameter defines the serial baud rate.

<b>0</b>	<b>9600</b>	9600 baud
<b>1</b>	<b>19200</b>	19200 baud
<b>2</b>	<b>38400</b>	38400 baud

#### SERIAL FORMAT

This parameter defines the bit data format.

<b>0</b>	7-EVEN-1	Do not use with Modbus protocol.		
<b>1</b>	7-EVEN-2			
<b>2</b>	7-ODD-1			
<b>3</b>	7-ODD-2			
<b>4</b>	7-NONE-1			
<b>5</b>	7-NONE-2			
<b>6</b>	8-EVEN-1	8 data bits	Parity even	1 Stop bit
<b>7</b>	8-ODD-1	8 data bits	Parity odd	1 Stop bit
<b>8</b>	8-NONE-1	Do not use with Modbus protocol		
<b>9</b>	8-NONE-2	8 data bits	no Parity	2 Stop bits

#### SERIAL INIT

Not valid for Modbus communication

#### SERIAL PROTOCOL

Not valid for Modbus communication

#### SERIAL TIMER (S)

Not valid for Modbus communication

#### SERIAL VALUE

Not valid for Modbus communication

#### MODBUS

This parameter enables the Modbus protocol and determines the Modbus address.

<b>0</b>	Do not use for Modbus protocol (Modbus disabled)
<b>1 ... 247</b>	Modbus enabled: Serial interface is using Modbus RTU protocol The number set here determines the Modbus node address.

### 7.2.2 Modbus Communication

The following Modbus functions are available:

#### **Read Holding Registers und Write Multiple Registers**

With the functions “Read Holding Registers” and “Write Multiple Registers” it is possible to access all registers of the device.

All variables (actual data) and status registers are mapped to Modbus Holding Registers. However, as all registers of the device are 32 bit registers but Modbus Holding registers are only 16 bit registers, each register of the device requires two Holding registers. (For this reason the use of Modbus function “Write Single Register” is not possible.)

It is only possible to access to one single register of the touchMATRIX® device by each read or write operation, therefore the “Quantity (or number) of registers” in the Modbus request must always be 2.

#### **Access to parameters**

Holding Register 0x0000 / 0x0001 hex and following allow access to the device parameters.

The holding register numbers for a certain parameter can be calculated by the parameter # that can be found in the parameter table in the touchMatrix® device manual:

Holding Register low = (parameter #) x 2

Holding Register high = (parameter #) x 2 + 1

Example: Access to parameter # 51 “PRESELECTION 1” by Holding Register 0x0066 and 0x0067 hex.

#### **Access to actual data**

Holding Register 0x1000 / 0x1001 hex and following allow access to variables of the device (actual data registers):

Holding Register 0x1000 / 0x1001 hex -> Actual data with serial Code “:0” (Display value)

Holding Register 0x1002 / 0x1003 hex -> Actual data with serial Code “:1”

Holding Register 0x1004 / 0x1005 hex -> Actual data with serial Code “:2”

Holding Register 0x1006 / 0x1007 hex -> Actual data with serial Code “:3”

etc.

#### **Access to status registers**

Holding Register 0x2000 / 0x2001 hex and following allow access to status registers of the device:

Holding Register 0x2000 / 0x2001 hex -> Output Status (Ctrl. Out status, read only)

Holding Register 0x2002 / 0x2003 hex -> Serial Commands

Holding Register 0x2004 / 0x2005 hex -> External Command (Ctrl. In status, read only)

Holding Register 0x2006 / 0x2007 hex -> All Commands (read only)

#### **Read Coils und Write Single Coil**

With the functions “Read Coils” and “Write Single Coil” it is possible to read and set/reset single commands:

Coil Number	Serial code of command	Command	
0	54	Reset / Set	Reset/Set Value of channel A and B
1	55	Freeze Display	Freeze actual display value
2	56	Touch Disable	Disable touch screen
3	57	Clear Lock	Loosen locking of all outputs / relay
4	58	Clear Min/Max	Reset of the min. / max. values
5	59	Serial Print (do not use with Modbus)	Sending of serial data
6	60	Teach Preset 1	Current display value (reference source here is the one-line display) is stored as PRESELECTION 1
7	61	Teach Preset 2	Current display value (reference source here is the one-line display ) is stored as PRESELECTION 2
8	62	Teach Preset 3	Current display value (reference source here is the one-line display) is stored as PRESELECTION 3
9	63	Teach Preset 4	Current display value (reference source here is the one-line display) is stored as PRESELECTION 4
10	64	Scroll Display	Display switching (see display in operation mode)
11	65	Clear Loop Time	Release all latched switching conditions
12	66	Start Preselection	The preselection starts
13	67	Activate Data (not required with Modbus)	The data is activated.
14	68	Store to EEPROM	Store to EEPROM
15	69	Testprogram (do not use with Modbus)	Testprogram (do not use with Modbus)

### 7.2.3 Diagnostics

The device supports the diagnostics subfunction 00 “Return Query Data”. Other diagnostics functions are not available.

### 7.3 Parameter list / serial codes

#	Menu	Name	Serial Code	Min	Max	Default
0	GENERAL MENU	OPERATIONAL MODE	00	0	0	8
1	GENERAL MENU	ENCODER PROPERTIES	01	0	0	3
2	GENERAL MENU	ENCODER SUPPLY	02	0	0	1
3	GENERAL MENU	COUNTING DIRECTION	03	0	0	3
4	GENERAL MENU	LINEARIZATION MODE	04	0	0	2
5	GENERAL MENU	PIN PRESELECTION	05	0	0	9999
6	GENERAL MENU	PIN PARAMETER	06	0	0	9999
7	GENERAL MENU	BACK UP MEMORY	07	1	0	1
8	GENERAL MENU	FACTORY SETTINGS	08	0	0	1
9	GENERAL MENU	—	09	0	0	0
10	SPEED A SETTINGS	DISPLAY VALUE	10	1000	1	99999999
11	SPEED A SETTINGS	BASE FREQUENCY (HZ)	11	100	1	500000
12	SPEED A SETTINGS	DECIMAL POINT	12	1	0	7
13	SPEED A SETTINGS	SAMPLING TIME (S)	13	100	5	9999
14	SPEED A SETTINGS	WAIT TIME (S)	14	100	1	8000
15	SPEED A SETTINGS	STANDSTILL TIME (S)	15	0	0	9999
16	SPEED A SETTINGS	AVERAGE FILTER	16	0	0	8
17	SPEED A SETTINGS	SCALE UNITS	17	0	0	29
18	SPEED A SETTINGS	—	18	0	0	0
19	SPEED A SETTINGS	—	19	0	0	0
20	SPEED A SETTINGS	—	20	0	0	0
21	SPEED B SETTINGS	DISPLAY VALUE	21	1000	1	99999999
22	SPEED B SETTINGS	BASE FREQUENCY (HZ)	22	100	1	500000
23	SPEED B SETTINGS	DECIMAL POINT	23	1	0	7
24	SPEED B SETTINGS	SAMPLING TIME (S)	24	100	5	9999
25	SPEED B SETTINGS	WAIT TIME (S)	25	100	1	8000
26	SPEED B SETTINGS	STANDSTILL TIME (S)	26	0	0	9999
27	SPEED B SETTINGS	AVERAGE FILTER	27	0	0	8
28	SPEED B SETTINGS	SCALE UNITS	28	0	0	29
29	SPEED B SETTINGS	—	29	0	0	0
30	SPEED B SETTINGS	—	30	0	0	0
31	SPEED B SETTINGS	—	31	0	0	0
32	COUNTER A SETTINGS	FACTOR	32	100000	1	9999999
33	COUNTER A SETTINGS	SET VALUE	33	0	-99999999	99999999
34	COUNTER A SETTINGS	DECIMALPOINT	34	0	0	7
35	COUNTER A SETTINGS	SCALE UNITS	35	12	0	29
36	COUNTER A SETTINGS	SECOND MODE	36	0	0	4
37	COUNTER A SETTINGS	SECOND SET VALUE	37	0	-99999999	99999999
38	COUNTER A SETTINGS	SECOND DEC.POINT	38	0	0	7
39	COUNTER A SETTINGS	SECOND SCALE UNITS	39	12	0	29
40	COUNTER A SETTINGS	—	40	0	0	0
41	COUNTER A SETTINGS	—	41	0	0	0

#	Menu	Name	Serial Code	Min	Max	Default
42	COUNTER B SETTINGS	FACTOR	42	100000	1	9999999
43	COUNTER B SETTINGS	SET VALUE	43	0	-99999999	99999999
44	COUNTER B SETTINGS	DECIMALPOINT	44	0	0	7
45	COUNTER B SETTINGS	SCALE UNITS	45	12	0	29
46	COUNTER B SETTINGS	SECOND MODE	46	0	0	4
47	COUNTER B SETTINGS	SECOND SET VALUE	47	0	-99999999	99999999
48	COUNTER B SETTINGS	SECOND DEC.POINT	48	0	0	7
49	COUNTER B SETTINGS	SECOND SCALE UNITS	A0	12	0	29
50	COUNTER B SETTINGS	—	A1	0	0	0
51	COUNTER B SETTINGS	—	A2	0	0	0
52	COLLECTION SETTINGS	DECIMALPOINT FREQ.	A3	0	0	7
53	COLLECTION SETTINGS	SCALE UNITS FREQ.	A4	0	0	29
54	COLLECTION SETTINGS	DECIMALPOINT COUN.	A5	0	0	7
55	COLLECTION SETTINGS	SCALE UNITS COUN	A6	0	0	29
56	SCALING SETTINGS	SOURCE	A7	0	0	7
57	SCALING SETTINGS	FACTOR	A8	1	-99999999	99999999
58	SCALING SETTINGS	DIVIDER	A9	1	1	99999999
59	SCALING SETTINGS	ADDITIVE VALUE	B0	0	-99999999	99999999
60	PRESELECTION VALUES	PRESELECTION 1	B1	1000	-99999999	99999999
61	PRESELECTION VALUES	PRESELECTION 2	B2	2000	-99999999	99999999
62	PRESELECTION VALUES	PRESELECTION 3	B3	3000	-99999999	99999999
63	PRESELECTION VALUES	PRESELECTION 4	B4	4000	-99999999	99999999
64	PRESELECTION 1 MENU	SOURCE 1	B5	0	0	8
65	PRESELECTION 1 MENU	MODE 1	B6	0	0	11
66	PRESELECTION 1 MENU	HYSTERESIS 1	B7	0	0	99999
67	PRESELECTION 1 MENU	PULSE TIME 1 (S)	B8	0	0	60000
68	PRESELECTION 1 MENU	OUTPUT TARGET 1	B9	1	0	6
69	PRESELECTION 1 MENU	OUTPUT POLARITY 1	C0	0	0	1
70	PRESELECTION 1 MENU	OUTPUT LOCK 1	C1	0	0	1
71	PRESELECTION 1 MENU	START UP DELAY 1 (S)	C2	0	0	60000
72	PRESELECTION 1 MENU	EVENT COLOR 1	C3	0	0	3
73	PRESELECTION 1 MENU	—	C4	0	0	0
74	PRESELECTION 2 MENU	SOURCE 2	C5	0	0	8
75	PRESELECTION 2 MENU	MODE 2	C6	0	0	11

#	Menu	Name	Serial Code	Min	Max	Default
76	PRESELECTION 2 MENU	HYSTERESIS 2	C7	0	0	99999
77	PRESELECTION 2 MENU	PULSE TIME 2 (S)	C8	0	0	60000
78	PRESELECTION 2 MENU	OUTPUT TARGET 2	C9	2	0	6
79	PRESELECTION 2 MENU	OUTPUT POLARITY 2	D0	0	0	1
80	PRESELECTION 2 MENU	OUTPUT LOCK 2	D1	0	0	1
81	PRESELECTION 2 MENU	START UP DELAY 2 (S)	D2	0	0	60000
82	PRESELECTION 2 MENU	EVENT COLOR 2	D3	0	0	3
83	PRESELECTION 2 MENU	—	D4	0	0	0
84	PRESELECTION 3 MENU	SOURCE 3	D5	0	0	8
85	PRESELECTION 3 MENU	MODE 3	D6	0	0	11
86	PRESELECTION 3 MENU	HYSTERESIS 3	D7	0	0	99999
87	PRESELECTION 3 MENU	PULSE TIME 3 (S)	D8	0	0	60000
88	PRESELECTION 3 MENU	OUTPUT TARGET 3	D9	3	0	6
89	PRESELECTION 3 MENU	OUTPUT POLARITY 3	E0	0	0	1
90	PRESELECTION 3 MENU	OUTPUT LOCK 3	E1	0	0	1
91	PRESELECTION 3 MENU	START UP DELAY 3	E2	0	0	1
92	PRESELECTION 3 MENU	EVENT COLOR 3	E3	0	0	3
93	PRESELECTION 3 MENU	—	E4	0	0	0
94	PRESELECTION 4 MENU	SOURCE 4	E5	0	0	8
95	PRESELECTION 4 MENU	MODE 4	E6	0	0	11
96	PRESELECTION 4 MENU	HYSTERESIS 4	E7	0	0	99999
97	PRESELECTION 4 MENU	PULSE TIME 4 (S)	E8	0	0	60000
98	PRESELECTION 4 MENU	OUTPUT TARGET 4	E9	4	0	6
99	PRESELECTION 4 MENU	OUTPUT POLARITY 4	F0	0	0	1
100	PRESELECTION 4 MENU	OUTPUT LOCK 4	F1	0	0	1

#	Menu	Name	Serial Code	Min	Max	Default
101	PRESELECTION 4 MENU	START UP DELAY 4	F2	0	0	1
102	PRESELECTION 4 MENU	EVENT COLOR 4	F3	0	0	3
103	PRESELECTION 4 MENU	—	F4	0	0	0
104	SERIAL MENU	UNIT NUMBER	90	11	11	99
105	SERIAL MENU	SERIAL BAUD RATE	91	0	0	2
106	SERIAL MENU	SERIAL FORMAT	92	0	0	9
107	SERIAL MENU	SERIAL INIT	9~	0	0	1
108	SERIAL MENU	SERIAL PROTOCOL	F5	0	0	1
109	SERIAL MENU	SERIAL TIMER (S)	F6	0	0	60000
110	SERIAL MENU	SERIAL VALUE	F7	0	0	9
111	SERIAL MENU	SERIAL VALUE	F8	0	0	247
112	SERIAL MENU	—	F9	0	0	0
113	SERIAL MENU	—	G0	0	0	0
114	ANALOG MENU	ANALOG SOURCE	G1	0	0	8
115	ANALOG MENU	ANALOG FORMAT	G2	0	0	2
116	ANALOG MENU	ANALOG START	G3	0	-99999999	99999999
117	ANALOG MENU	ANALOG END	G4	10000	-99999999	99999999
118	ANALOG MENU	ANALOG GAIN %	G5	10000	0	11000
119	ANALOG MENU	ANALOG OFFSET %	G6	0	-9999	9999
120	ANALOG MENU	—	G7	0	0	0
121	COMMAND MENU	INPUT 1 ACTION	G8	0	0	31
122	COMMAND MENU	INPUT 1 CONFIG.	G9	2	0	3
123	COMMAND MENU	INPUT 2 ACTION	H0	0	0	31
124	COMMAND MENU	INPUT 2 CONFIG.	H1	2	0	3
125	COMMAND MENU	INPUT 3 ACTION	H2	0	0	31
126	COMMAND MENU	INPUT 3 CONFIG.	H3	2	0	3
127	COMMAND MENU	—	H4	0	0	0
128	COMMAND MENU	—	H5	0	0	0
129	COMMAND MENU	—	H6	0	0	0
130	COMMAND MENU	—	H7	0	0	0
131	DISPLAY MENU	START DISPLAY	H8	0	0	6
132	DISPLAY MENU	SOURCE SINGLE	H9	0	0	8
133	DISPLAY MENU	SOURCE DUAL TOP	I0	0	0	8
134	DISPLAY MENU	SOURCE DUAL DOWN	I1	1	0	8
135	DISPLAY MENU	LARGE DISPLAY	I2	0	0	5
136	DISPLAY MENU	COLOR	I3	0	0	2
137	DISPLAY MENU	BRIGHTNESS %	I4	90	10	100
138	DISPLAY MENU	CONTRAST	I5	1	0	2
139	DISPLAY MENU	SCREEN SAVER (S)	I6	0	0	9999
140	DISPLAY MENU	UP-DATE-TIME (S)	I7	100	5	9999
141	DISPLAY MENU	FONT	I8	0	0	1

#	Menu	Name	Serial Code	Min	Max	Default
142	DISPLAY MENU	QUICKSTART BUTTON	I9	0	0	1
143	LINEARIZATION MENU	SOURCE	J0	0	0	8
144	LINEARIZATION MENU	P1(X)	J1	0	-99999999	99999999
145	LINEARIZATION MENU	P1(Y)	J2	-99999999	99999999	0
146	LINEARIZATION MENU	P2(X)	J3	-99999999	99999999	0
147	LINEARIZATION MENU	P2(Y)	J4	-99999999	99999999	0
148	LINEARIZATION MENU	P3(X)	J5	-99999999	99999999	0
149	LINEARIZATION MENU	P3(Y)	J6	-99999999	99999999	0
150	LINEARIZATION MENU	P4(X)	J7	-99999999	99999999	0
151	LINEARIZATION MENU	P4(Y)	J8	-99999999	99999999	0
152	LINEARIZATION MENU	P5(X)	J9	-99999999	99999999	0
153	LINEARIZATION MENU	P5(Y)	K0	-99999999	99999999	0
154	LINEARIZATION MENU	P6(X)	K1	-99999999	99999999	0
155	LINEARIZATION MENU	P6(Y)	K2	-99999999	99999999	0
156	LINEARIZATION MENU	P7(X)	K3	-99999999	99999999	0
157	LINEARIZATION MENU	P7(Y)	K4	-99999999	99999999	0
158	LINEARIZATION MENU	P8(X)	K5	-99999999	99999999	0
159	LINEARIZATION MENU	P8(Y)	K6	-99999999	99999999	0
160	LINEARIZATION MENU	P9(X)	K7	-99999999	99999999	0
161	LINEARIZATION MENU	P9(Y)	K8	-99999999	99999999	0
162	LINEARIZATION MENU	P10(X)	K9	-99999999	99999999	0
163	LINEARIZATION MENU	P10(Y)	L0	-99999999	99999999	0
164	LINEARIZATION MENU	P11(X)	L1	-99999999	99999999	0
165	LINEARIZATION MENU	P11(Y)	L2	-99999999	99999999	0
166	LINEARIZATION MENU	P12(X)	L3	-99999999	99999999	0
167	LINEARIZATION MENU	P12(Y)	L4	-99999999	99999999	0
168	LINEARIZATION MENU	P13(X)	L5	-99999999	99999999	0
169	LINEARIZATION MENU	P13(Y)	L6	-99999999	99999999	0
170	LINEARIZATION MENU	P14(X)	L7	-99999999	99999999	0
171	LINEARIZATION MENU	P14(Y)	L8	-99999999	99999999	0
172	LINEARIZATION MENU	P15(X)	L9	-99999999	99999999	0
173	LINEARIZATION MENU	P15(Y)	M0	-99999999	99999999	0
174	LINEARIZATION MENU	P16(X)	M1	-99999999	99999999	0
175	LINEARIZATION MENU	P16(Y)	M2	-99999999	99999999	0
176	LINEARIZATION MENU	P17(X)	M3	-99999999	99999999	0
177	LINEARIZATION MENU	P17(Y)	M4	-99999999	99999999	0
178	LINEARIZATION MENU	P18(X)	M5	-99999999	99999999	0
179	LINEARIZATION MENU	P18(Y)	M6	-99999999	99999999	0
180	LINEARIZATION MENU	P19(X)	M7	-99999999	99999999	0
181	LINEARIZATION MENU	P19(Y)	M8	-99999999	99999999	0
182	LINEARIZATION MENU	P20(X)	M9	-99999999	99999999	0
183	LINEARIZATION MENU	P20(Y)	N0	-99999999	99999999	0
184	LINEARIZATION MENU	P21(X)	N1	-99999999	99999999	0

#	Menu	Name	Serial Code	Min	Max	Default
185	LINEARIZATION MENU	P21(Y)	N2	-99999999	99999999	0
187	LINEARIZATION MENU	P22(Y)	N4	-99999999	99999999	0
188	LINEARIZATION MENU	P23(X)	N5	-99999999	99999999	0
189	LINEARIZATION MENU	P23(Y)	N6	-99999999	99999999	0
190	LINEARIZATION MENU	P24(X)	N7	-99999999	99999999	0
191	LINEARIZATION MENU	P24(Y)	N8	-99999999	99999999	0

### 7.3.1 Serial codes of commands:

Serial Code	Command
54	RESET/SET
55	FREEZE DISPLAY
56	TOUCH DISABLE
57	CLR LOCK
58	CLR MIN MAX
59	SERIAL PRINT
60	TEACH PRES 1
61	TEACH PRES 2
62	TEACH PRES 3
63	TEACH PRES 4
64	SCROLL_DISPLAY
65	CLEAR LOOP TIME
66	START PRESELCTION
67	ACTIVATE DATA
68	STORE EEPROM
69	TESTPROGRAMM

## 7.4 Linearization


The linearization function of this unit allows converting a linear input signal into a non-linear developing (or vice versa). There are 24 programmable x/y coordinates available, which can be set in any desired distance over the full conversion range. Between two coordinates, the unit uses linear interpolation. Therefore it is advisable to use more coordinates in a range with strong curves and only a few coordinates where the curvature is less.

To specify an individual linearization curve, the parameter LINEARISAZATION MODE must be set to either 1 QUADRANT or 4 QUADRANT (see following diagram).

The parameters P1(X) to P24(X) are used to specify the coordinates on the x-axis. These are the measuring values that the unit normally would generate according to the actual input signal.

Now enter the attached values to parameter P1(Y) to P24(Y). These are the values that the unit will generate instead of the x-values, i.e. P5(Y) replaces P5(X) etc.

**The X-Coordinates must use continuously increasing settings, i.e. P1(X) must have the lowest and P24(X) must have the highest setting. If the measured value is bigger than the last defined X-value, the corresponding Y-value is displayed.**

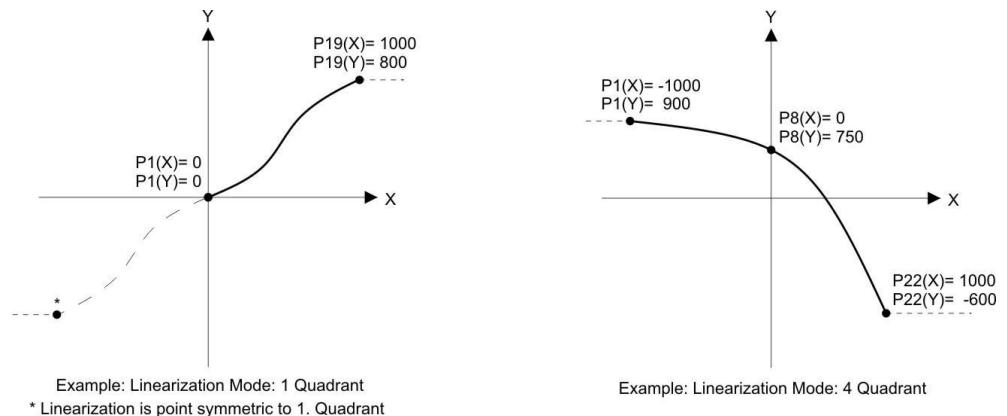

#### Mode: 1 Quadrant:


P1(X) must be set to zero. Linearization is only defined in the positive range and the negative range will be mirrored symmetric to central point.


#### Mode: 4 Quadrant:

P1(X) can also be set to a negative value. If the measured value is smaller than P1(X), P1(Y) is displayed.

#### Application Example:


The picture below shows a watergate where the opening is picked up by means of an incremental encoder. We would like to display the clearance of the gate "d", but the existing encoder information is proportional to the angular information  $\varphi$ .

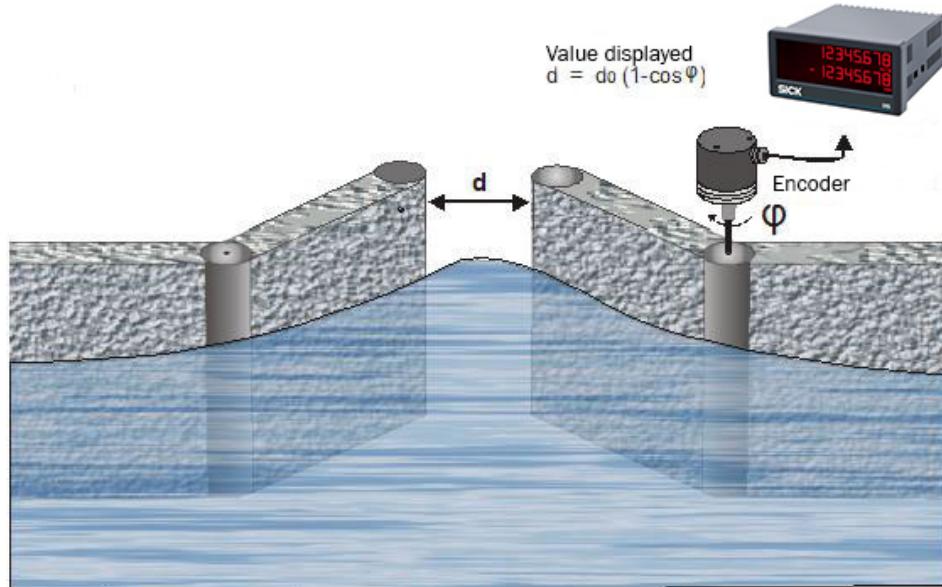

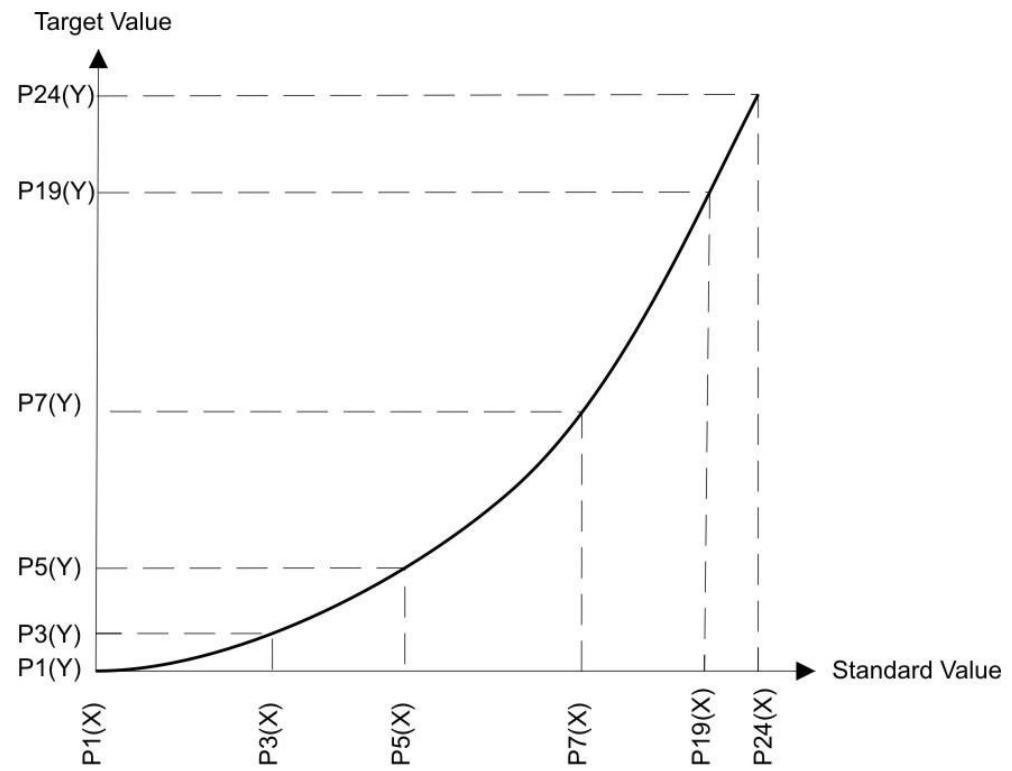


## 7.5 Dimensions


Front view

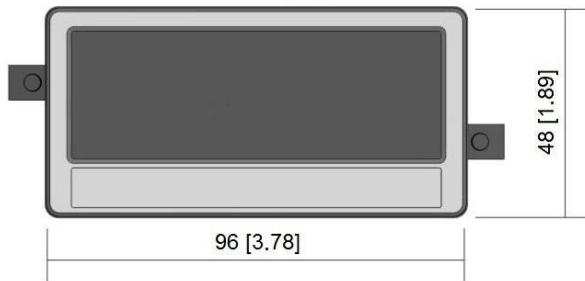


Back view

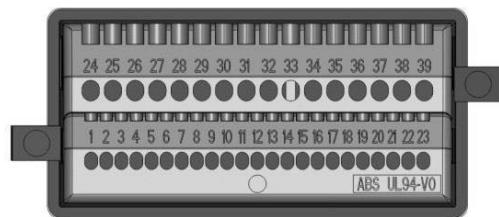

Side view

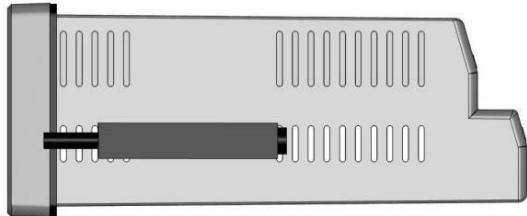

Top view

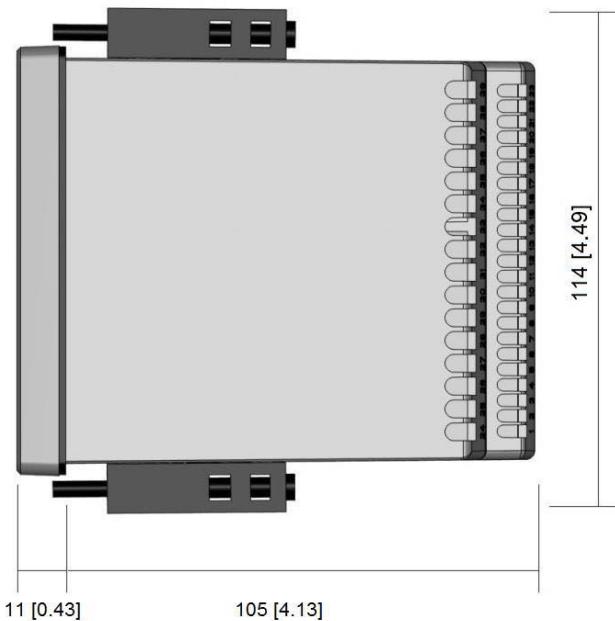

## 7.6 Technical specifications

Technical specifications		
Connections:	Connector type:	screw terminal, 1.5 mm <sup>2</sup> / AWG 16
Power supply (DC):	Input voltage: Protection circuit: Consumption: Fuse protection:	18 ... 30 VDC reverse polarity protection approx. 100 mA (unloaded) extern: T 0.5 A
Power supply (AC): (Option AC)	Input voltage: Power consumption: Fuse protection:	115 ... 230 VAC, (50 ... 60 Hz ) approx. 3 VA (unloaded) extern: T 0.1A
Encoder supply:	DC version:  AC version:	24 VDC (approx. 1 V lower than the power supply voltage), max. 250 mA 24 VDC ( $\pm$ 15%), (max. 150 mA until 45 °C / 80 mA by more than 45 °C)
Encoder supply: DIS-IPDTACCR0000	DC version:  AC version	24 VDC (approx. 1 V lower than the power supply voltage), max. 250 mA or 5 VDC ( $\pm$ 15%), max. 250 mA 24 VDC ( $\pm$ 15%) (max. 150 mA until 45 °C / 80 mA by more than 45 °C) or 5 VDC ( $\pm$ 15%), max. 250 mA
Incremental inputs:  DIS-IPDTACCR0000	Number of inputs: Configuration: Format: Frequency: Load:	2 (A, B) PNP-, NPN-, Namur or Tri-State HTL (Low 0 ... 3 V, High 9 ... 30 V) max. 250 kHz max. 6 mA / $R_i > 5 \text{ k}\Omega$ / 470 pF
Incremental inputs:  DIS-IPDTACCR0000	Number of inputs: Configuration: RS422: HTL differential HTL PNP / NPN: Load:	2 with inverted signal (A, /A, B, /B) RS422, HTL differential, HTL PNP or HTL NPN max. 1 MHz (RS422 differential signal > 0,5V) max. 500 kHz (HTL differential signal > 2 V) max. 250 kHz (Low 0 ... 3 V, High 9 ... 30 V) max. 3 mA / $R_i > 10 \text{ k}\Omega$ / 47 pF
Accuracy:	Measurement:	+/- 50 ppm, +/- 1 digit
Control inputs:	Number of inputs: Format: Frequency: Load:	3 HTL, PNP (Low 0 ... 3 V, High 9 ... 30 V) max. 10 kHz max. 2 mA / $R_i > 15 \text{ k}\Omega$ / 470 pF
Control outputs: (Option CR)	Number of inputs: Format / level: Output current: Reaction time:	4 5 ... 30 V (depend on COM+ voltage), PNPs max. 200 mA < 1 ms
Serial interface: (Option CR)	Format (Option CR) Baudrate:	RS485 9600, 19200 oder 38400 Baud
Display:	Type: Display range: Digit height: Color: Operation:	Graphic LCD with backlight 8 digits plus sign (-99999999 ... 99999999) 13 mm height red / green / yellow (selectable) resistive touchscreen

Technical specifications		
Housing:	Material: Mounting: Dimensions (w x h x d): Cut out (w x h): Protection class: Weight:	ABS, UL 94 V-0 panel 96 x 48 x 116 mm / 3.78 x 1.89 x 4.56 inch 91 x 43 mm / 3.58 x 1.69 inch IP65 (front), IP20 (rear) approx. 200 g
Ambient temperature:	Operation: Storage:	20°C ... +60°C / -4 ... 140°F -25°C ... +70°C / -13 ... 158°F
Conformity and standards:	EMC 2014/30/EU:  LV 2014/35/EU: (Only for option AC and RL) RoHS (II) 2011/65/EU RoHS (III) 2015/863:	EN 61326-1:2013 for industrial location EN 55011:2016 + A1:2017 + A11:2020 Class A EN 61010-1:2010 + A1:2019 + AC:2019-04 EN IEC 61010-2-201:2018  EN IEC 63000:2018

## 7.7 Conformities and certificates

You can obtain declarations of conformity, certificates, and the current operating instructions for the product at [www.sick.com](http://www.sick.com). To do so, enter the product part number in the search field (part number: see the entry in the “P/N” or “Ident. no.” field on the type label).

### 7.7.1 EU declaration of conformity

#### Excerpt

The undersigned, representing the manufacturer, herewith declares that the product is in conformity with the provisions of the following EU directive(s) (including all applicable amendments), and that the standards and/or technical specifications stated in the EU declaration of conformity have been used as a basis for this.

### 7.7.2 UK declaration of conformity

#### Excerpt

The undersigned, representing the following manufacturer herewith declares that this declaration of conformity is issued under the sole responsibility of the manufacturer. The product of this declaration is in conformity with the provisions of the following relevant UK Statutory Instruments (including all applicable amendments), and the respective standards and/or technical specifications have been used as a basis.



<b>Australia</b>	<b>Hungary</b>	<b>Slovenia</b>
Phone +61 (3) 9457 0600 1800 33 48 02 – tollfree	Phone +36 1 371 2680 E-Mail <a href="mailto:ertekesites@sick.hu">ertekesites@sick.hu</a>	Phone +386 591 78849 E-Mail <a href="mailto:office@sick.si">office@sick.si</a>
E-Mail <a href="mailto:sales@sick.com.au">sales@sick.com.au</a>		
<b>Austria</b>	<b>India</b>	<b>South Africa</b>
Phone +43 (0) 2236 62288-0	Phone +91-22-6119 8900 E-Mail <a href="mailto:info@sick-india.com">info@sick-india.com</a>	Phone +27 10 060 0550 E-Mail <a href="mailto:info@sickautomation.co.za">info@sickautomation.co.za</a>
E-Mail <a href="mailto:office@sick.at">office@sick.at</a>		
<b>Belgium/Luxembourg</b>	<b>Israel</b>	<b>South Korea</b>
Phone +32 (0) 2 466 55 66	Phone +972 97110 11 E-Mail <a href="mailto:info@sick-sensors.com">info@sick-sensors.com</a>	Phone +82 2 786 6321/4 E-Mail <a href="mailto:infokorea@sick.com">infokorea@sick.com</a>
E-Mail <a href="mailto:info@sick.be">info@sick.be</a>		
<b>Brazil</b>	<b>Italy</b>	<b>Spain</b>
Phone +55 11 3215-4900	Phone +39 02 27 43 41 E-Mail <a href="mailto:info@sick.it">info@sick.it</a>	Phone +34 93 480 31 00 E-Mail <a href="mailto:info@sick.es">info@sick.es</a>
E-Mail <a href="mailto:comercial@sick.com.br">comercial@sick.com.br</a>		
<b>Canada</b>	<b>Japan</b>	<b>Sweden</b>
Phone +1 905.771.1444	Phone +81 3 5309 2112 E-Mail <a href="mailto:support@sick.jp">support@sick.jp</a>	Phone +46 10 110 10 00 E-Mail <a href="mailto:info@sick.se">info@sick.se</a>
E-Mail <a href="mailto:cs.canada@sick.com">cs.canada@sick.com</a>		
<b>Czech Republic</b>	<b>Malaysia</b>	<b>Switzerland</b>
Phone +420 234 719 500	Phone +603-8080 7425 E-Mail <a href="mailto:enquiry.my@sick.com">enquiry.my@sick.com</a>	Phone +41 41 619 29 39 E-Mail <a href="mailto:contact@sick.ch">contact@sick.ch</a>
E-Mail <a href="mailto:sick@sick.cz">sick@sick.cz</a>		
<b>Chile</b>	<b>Mexico</b>	<b>Taiwan</b>
Phone +56 (2) 2274 7430	Phone +52 (472) 748 9451 E-Mail <a href="mailto:mexico@sick.com">mexico@sick.com</a>	Phone +886-2-2375-6288 E-Mail <a href="mailto:sales@sick.com.tw">sales@sick.com.tw</a>
E-Mail <a href="mailto:chile@sick.com">chile@sick.com</a>		
<b>China</b>	<b>Netherlands</b>	<b>Thailand</b>
Phone +86 20 2882 3600	Phone +31 (0) 30 204 40 00 E-Mail <a href="mailto:info@sick.nl">info@sick.nl</a>	Phone +66 2 645 0009 E-Mail <a href="mailto:marcom.th@sick.com">marcom.th@sick.com</a>
E-Mail <a href="mailto:info.china@sick.net.cn">info.china@sick.net.cn</a>		
<b>Denmark</b>	<b>New Zealand</b>	<b>Turkey</b>
Phone +45 45 82 64 00	Phone +64 9 415 0459 0800 222 278 – tollfree E-Mail <a href="mailto:sales@sick.co.nz">sales@sick.co.nz</a>	Phone +90 (216) 528 50 00 E-Mail <a href="mailto:info@sick.com.tr">info@sick.com.tr</a>
E-Mail <a href="mailto:sick@sick.dk">sick@sick.dk</a>		
<b>Finland</b>	<b>Norway</b>	<b>United Arab Emirates</b>
Phone +358-9-25 15 800	Phone +47 67 81 50 00 E-Mail <a href="mailto:sick@sick.no">sick@sick.no</a>	Phone +971 (0) 4 88 65 878 E-Mail <a href="mailto:contact@sick.ae">contact@sick.ae</a>
E-Mail <a href="mailto:sick@sick.fi">sick@sick.fi</a>		
<b>France</b>	<b>Poland</b>	<b>United Kingdom</b>
Phone +33 1 64 62 35 00	Phone +48 22 539 41 00 E-Mail <a href="mailto:info@sick.pl">info@sick.pl</a>	Phone +44 (0)17278 31121 E-Mail <a href="mailto:info@sick.co.uk">info@sick.co.uk</a>
E-Mail <a href="mailto:info@sick.fr">info@sick.fr</a>		
<b>Germany</b>	<b>Romania</b>	<b>USA</b>
Phone +49 (0) 2 11 53 010	Phone +40 356-17 11 20 E-Mail <a href="mailto:office@sick.ro">office@sick.ro</a>	Phone +1 800.325.7425 E-Mail <a href="mailto:info@sick.com">info@sick.com</a>
E-Mail <a href="mailto:info@sick.de">info@sick.de</a>		
<b>Greece</b>	<b>Singapore</b>	<b>Vietnam</b>
Phone +30 210 6825100	Phone +65 6744 3732 E-Mail <a href="mailto:sales.gsg@sick.com">sales.gsg@sick.com</a>	Phone +65 6744 3732 E-Mail <a href="mailto:sales.gsg@sick.com">sales.gsg@sick.com</a>
E-Mail <a href="mailto:office@sick.com.gr">office@sick.com.gr</a>		
<b>Hong Kong</b>	<b>Slovakia</b>	
Phone +852 2153 6300	Phone +421 482 901 201 E-Mail <a href="mailto:mail@sick-sk.sk">mail@sick-sk.sk</a>	
E-Mail <a href="mailto:ghk@sick.com.hk">ghk@sick.com.hk</a>		

Detailed addresses and further locations at [www.sick.com](http://www.sick.com)



Sensor Intelligence.