
## Type code

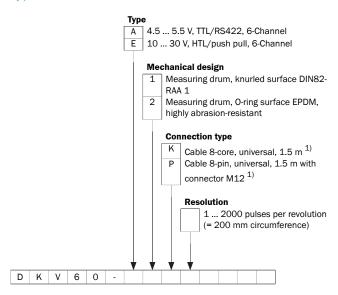

 $<sup>^{1)}</sup>$  The universal cable outlet is positioned so that a kink-free cable in a radial or axial direction is possible.