



8029082 1223
9389042 1223
WLG4S_DID8389466
8389466
217489415
9389041 1223 (1.1.0)

Australia Phone +61 3 9467 0800	Osterreich Phone +43 (0)22 36 62 28 8-0
Belgium/Luxembourg Phone +32 (0)2 468 55 66	Norge Phone +47 67 61 50 00
Brasil Phone +55 11 5215-4900	Polka Phone +48 22 837 40 50
Canada Phone +1 905 771 14 44	România Phone +40 356 171 120
China Phone +86 4000 121 000 +862-2353-6300	Russia Phone +7 495 775-09-30
Danmark Phone +45 45 82 64 00	Schweiz Phone +41 41 619 29 39
Deutschland Phone +49 211 5301 301	Sverige Phone +46 744 37 32
España Phone +34 93 480 31 00	South Korea Phone +82 2 786 6321/4
France Phone +33 1 64 62 39 00	Sri Lanka Phone +94 11 472 3733
Great Britain Phone +44 (0)1727 83121	Taiwan Phone +886 2 2375-6288
India Phone +91-22-4033 8333	Türkiye Phone +90 (216) 528 50 00
Israel Phone +972-4-6801000	United Arab Emirates Phone +971 (0)4 5855 878
Italy Phone +39 02 27 43 41	USA/Mexico Phone +1 950 941 6780
Japan Phone +81 (03) 5309 2112	
Magnesium Phone +36 1 371 2680	
Niederland Phone +31 (0)30 229 25 44	

SICK AG, Erwin-Sick-Strasse 1, D-79183 Waldkirch

More representatives and agencies at www.sick.com - Subject to change without notice - The specified product features and technical data do not represent any guarantee.

Weitere Niederlassungen finden Sie unter www.sick.com - Irrtümer und Änderungen vorbehalten - Angegebene Produkteigenschaften und technische Daten stellen keine Garantieerklärung dar.

Plus de représentations et d'agences à l'adresse www.sick.com - Sujet à modification sans préavis - Les caractéristiques de produit et techniques indiquées ne constituent pas de déclaration de garantie.

Para mais representantes e agências, consulte www.sick.com - Alterações poderão ser feitas sem prévio aviso - As características do produto e os dados técnicos apresentados não constituem declaração de garantia.

Fiere representanter og agenturer på www.sick.com - Med forbehold for ændringer og fejl - De angivne produktdata og tekniske data udgør ikke nogen garantioplysning.

Altri rappresentanti ed agenzie si trovano su www.sick.com - Contenuti soggetti a modifiche senza preavviso - Le caratteristiche del prodotto e i dati tecnici non rappresentano una dichiarazione di garanzia.

Meer vestigingen en correcties voorbehouden - Angegeven producteigenschaften en technische gegevens vormen geen garantieverklaring.

Más representantes y agencias en www.sick.com - Sujeto a cambio sin previo aviso - Las características y los datos técnicos especificados no constituyen ninguna declaración de garantía.

欲了解更多代表机构和代理商信息，请登录 www.sick.com - 如有更改，不另行通知 - 对所给出的产品特性和技术参数的正确性不予保证。



Please note the validity of the additional operating instructions for automation functions

1. Device features

Data Storage class 2:

The configured Device supports Data Storage in such a manner that the replacement Device requires user manipulation such as teach-in prior to operation with the same performance.

Supported Smart Sensor Profile Function Classes	Binary Data Channel, Teach Channel
Supported IO-Link Time Stamp Profile modes	none (IO-Link Time Stamp Profile not supported)
Block Parameter Transmission	supported
Data Storage functionality	supported
Access Locks (supported / modes)	Local User Interface

2. Physical layer

Note: The IO-Link Device's max. current consumption (inclusive load current) shall not exceed the master port's max. output power current.

SIO Modus	yes
Min Cycle Time	2.3 ms
Baudrate ²	COM2
Process Data Length (IN)	2 Byte
IODD version	V1.43583
Valid for IO-Link version	1.1

3. Process data

Record³: 2 Byte

Bitoffset								
Byte 0	15	14	13	12	11	10	9	8
Type/Subindex	Unsigned Integer 14							
Bitoffset								
Byte 1	7	6	5	4	3	2	1	0
Type/Subindex	Unsigned Integer 14							

4. Service data

The following ISDUs will not be saved via Data-Storage: Teach-in channel, Teach-in state, Quint.1 configuration, Quint.2 SP1 / SP2, Quint.2 configuration, Device specific tag, Sender configuration, Quality of teach, Temperature zone, Quality of run, Current receiver level (live), Upper threshold (switch-on) dynamic, Lower threshold (switch-off) dynamic, Find me and SLTI Version

IO-Link specific							
Index dec (hex)	Name	Format (Offset)	Length	Access ¹	Default Value	Value / Range	Remark [Unit]
12 (0x0C)	Device Access Locks	Record ³	2 Byte	rw			The access to the device parameters can be restricted by setting appropriate flags within this parameter.
4 (0x04)	Local User Interface	Bool (3)	1 Bit	rw	0	0 = unlocked 1 = locked	
16 (0x10)	Vendor Name	String	7 Byte	ro	SICK AG		The vendor name that is assigned to a Vendor ID.
17 (0x11)	Vendor Text	String	64 Byte	ro			Additional information about the vendor.
18 (0x12)	Product Name	String	18 Byte	ro			Complete product name.
19 (0x13)	Product ID	String	16 Byte	ro			Vendor-specific product or type identification (e.g., item number or model number).
20 (0x14)	Product Text	String	45 Byte	ro			Additional product information for the device.
21 (0x15)	Serial Number	String	8 Byte	ro			Unique, vendor-specific identifier of the individual device.
22 (0x16)	Hardware Revision	String	4 Byte	ro			Unique, vendor-specific identifier of the hardware revision of the individual device.
23 (0x17)	Firmware Revision	String	16 Byte	ro			Unique, vendor-specific identifier of the firmware revision of the individual device.
24 (0x18)	Application-specific Tag	String	32 Byte	rw	***		Possibility to mark a device with user- or application-specific information.
36 (0x24)	Device Status	UInt	8 Bit	ro		0 = Device is OK 1 = Maintenance required 2 = Out of specification 3 = Functional check 4 = Failure	Indicator for the current device condition and diagnosis state.
37 (0x25)	Detailed Device Status	Array ³	9 Byte	ro		Octet String [3]	List of all currently pending events in the device.
40 (0x28)	PD Input	PD In	2 Byte	ro			Last valid process input data of the device.

¹ro = read only, wo = write only, rw = read/write

²COM values specify the bitrate (see IO-Link specification): COM1 (4,8 kbit/s), COM2 (38,4 kbit/s), COM3 (230,4 kbit/s)

³Subindex access not supported

SICK

8029082 1223
9389042 1223

WLG4S_DID8389466

8389466

217489415

9389041 1223 (1.1.0)

Australia Phone +61 3 9467 0800	Osterreich Phone +43 (0)22 36 62 28 8-0
Belgium/Luxembourg Phone +32 (0)2 468 55 66	Norge Phone +47 67 61 50 00
Brasil Phone +55 11 5215-9900	Polka Phone +48 22 837 40 50
Canada Phone +1 905 771 14 44	România Phone +40 356 171 120
China Phone +86 4000 121 000 +852 2153 6300	Russia Phone +7 495 775 09 30
Denmark Phone +45 45 82 64 00	Schweiz Phone +41 41 619 29 39
Deutschland Phone +49 211 5301 301	Singapore Phone +65 6744 3732
España Phone +34 93 480 31 00	South Africa Phone +27 11 472 3733
France Phone +33 1 64 62 39 00	South Korea Phone +82 2 786 6321/4
Great Britain Phone +44 (0)1727 83121	Suomi Phone +358 9 25 15 800
India Phone +91 22 4033 8333	Sverige Phone +46 10 110 10 00
Italy Phone +39 02 27 43 41	Taiwan Phone +886 2 2375 6288
Japan Phone +81 (0)3 5309 2112	Türkiye Phone +90 (216) 528 50 00
Magnetsville Phone +36 1 371 2680	United Arab Emirates Phone +971 (0)4 5565 878
Niederland Phone +31 (0)30 229 25 44	USA/Mexico Phone +1 952 941 6780

Please find detailed addresses and additional representations and agencies in all major industrial nations at www.sick.com

More representatives and agencies at www.sick.com - Subject to change without notice - The specified product features and technical data do not represent any guarantee.

Weitere Niederlassungen finden Sie unter www.sick.com - Irrtümer und Änderungen vorbehalten - Angegebene Produkteigenschaften und technische Daten stellen keine Garantieerklärung dar.

Plus de représentations et d'agences à l'adresse www.sick.com - Sujet à modification sans préavis - Les caractéristiques de produit et techniques indiquées ne constituent pas de déclaration de garantie.

Para mais representantes e agências, consulte www.sick.com - Alterações poderão ser feitas sem prévio aviso - As características do produto e os dados técnicos apresentados não constituem declaração de garantia.


Flere repræsentanter og agenturer på www.sick.com - Med forbehold for ændringer og fejl - De angivne produktdata og tekniske data udgør ikke nogen garantierklæring.

Altri rappresentanti ed agenzie si trovano su www.sick.com - Contenuti soggetti a modifiche senza preavviso - Le caratteristiche del prodotto e i dati tecnici non rappresentano una dichiarazione di garanzia.

Meer vestigingen en vertegenwoordigingen vindt u op www.sick.com - Wijzigingen en correcties voorbehouden - Aangegeven producteigenschappen en technische gegevens vormen geen garantieverklaring.

Más representantes y agencias en www.sick.com - Sujeto a cambio sin previo aviso - Las características y los datos técnicos especificados no constituyen ninguna declaración de garantía.

欲了解更多代表机构和代理商信息，请登录 www.sick.com - 如有更改，不另行通知 - 对所给出的产品特性和技术参数，其正确性不予保证。

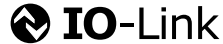

Please note the validity of the additional operating instructions for automation functions

ENGLISH

SICK device specific							
Index dec (hex)	Name	Format (Offset)	Length	Access ¹	Default Value	Value / Range	Remark (Unit)
25 (0x19)	Function Tag	String	32 Byte	rw	***		
26 (0x1A)	Location Tag	String	32 Byte	rw	***		
58 (0x3A)	Teach-in channel	UInt	8 Bit	rw	0	0 = default Qint. = Qint.1 1 = Qint.1 2 = Qint.2	
59 (0x3B)	Teach-in state	Record ³	1 Byte	ro			
1 (0x01)	Teach flags	Bool (4)	1 Bit	ro		false = Teachpoint 1 not taught true = Teachpoint 1 successfully taught	
2 (0x02)	Teach state	UInt (0)	4 Bit	ro		0 = IDLE 1 = SP1 SUCCESS 5 = BUSY 7 = ERROR	
60 (0x3C)	Qint.1 SP1 / SP2	Record ³	2 Byte	rw			
1 (0x01)	SP1 upper threshold (switch-on)	UInt (8)	8 Bit	rw	90	10...90 110...200	[%]
2 (0x02)	SP2 lower threshold (switch-off)	UInt (0)	8 Bit	rw	85	5...85 105...195	[%]
61 (0x3D)	Qint.1 configuration	Record	4 Byte	rw			
1 (0x01)	Switchpoint logic	UInt (24)	8 Bit	rw	128	128 = Vendor specific	
2 (0x02)	Switchpoint mode	UInt (16)	8 Bit	rw	128	128 = Vendor specific	
3 (0x03)	Switchpoint hysteresis	UInt (0)	16 Bit	rw	0	0 = Autodefined hysteresis	
62 (0x3E)	Qint.2 SP1 / SP2	Record ³	2 Byte	rw			
1 (0x01)	SP1 upper threshold (switch-on)	UInt (8)	8 Bit	rw	90	10...90 110...200	
2 (0x02)	SP2 lower threshold (switch-off)	UInt (0)	8 Bit	rw	85	5...85 105...195	
63 (0x3F)	Qint.2 configuration	Record	4 Byte	rw			
1 (0x01)	Switchpoint logic	UInt (24)	8 Bit	rw	128	128 = Vendor specific	
2 (0x02)	Switchpoint mode	UInt (16)	8 Bit	rw	128	128 = Vendor specific	
3 (0x03)	Switchpoint hysteresis	UInt (0)	16 Bit	rw	0	0 = Autodefined hysteresis	
64 (0x40)	Device specific tag	String	32 Byte	rw	***		
83 (0x53)	Detection mode	UInt	8 Bit	rw	0	0 = Highly-transparent objects 1 = Semi-transparent objects 2 = Opaque objects 3 = Bottles / trays 4 = Foil tear 255 = Manual	
92 (0x5C)	Physical input / output type configuration pin2	UInt	8 Bit	rw	3	1 = PNP 2 = NPN 3 = Push/Pull	
97 (0x61)	Sender configuration	UInt	8 Bit	rw	0	0 = Sender active 1 = Sender not active	
112 (0x70)	AutoAdapt	UInt	8 Bit	rw	1	0 = Off 1 = On - time based 2 = On - event based	
114 (0x72)	Quality of teach	UInt	8 Bit	ro		0...100	[%]
121 (0x79)	Pin 2 configuration	UInt	8 Bit	rw	40	0 = Deactivated / no function 1 = External input (Smart Task) 16 = Sender off 17 = Teach-in 33 = Quality of run alarm output 34 = Switching signal QL2 35 = Detection output Qint.1 39 = Switching signal QL1 40 = Switching signal QL1/	
154 (0x9A)	Temperature zone	UInt	8 Bit	ro		0 = Very cold 1 = Cold 2 = Moderate 3 = Warm 4 = Hot	Sensor-internal temperature
175 (0xAF)	Quality of run	UInt	8 Bit	ro		0...255	[%]
176 (0xB0)	Quality of run alarm threshold	UInt	8 Bit	rw	50	0...90	[%]
177 (0xB1)	Quality of alignment	UInt	8 Bit	ro		0...255	[%]
179 (0xB3)	Alarm thresholds for diagnostic parameters	Record	4 Byte	rw			
1 (0x01)	Operating hours threshold	UInt (0)	32 Bit	rw	40000	0...1000000	[h]

¹ ro = read only, wo = write only, rw = read/write

² COM values specify the bitrate (see IO-Link specification): COM1 (4,8 kbit/s), COM2 (38,4 kbit/s), COM3 (230,4 kbit/s)

³ Subindex access not supported

SICK

8029082 1223
9389042 1223
WLG4S_DID8389466
_8389466
217489415
9389041 1223 (1.1.0)

Australia Phone +61 3 9457 0800	Osterreich Phone +43 (0)22 36 62 28 8-0
Belgium/Luxembourg Phone +32 (0)2 468 55 66	Norge Phone +47 67 61 50 00
Brasil Phone +55 11 5215-4900	Polen Phone +48 22 837 40 50
Canada Phone +1 905 771 14 44	România Phone +40 356 171 120
China Phone +86 4000 121 000	Rusia Phone +7 495 775 09 30
Denmark Phone +45 45 82 64 00	Schweiz Phone +41 41 619 29 39
Deutschland Phone +49 211 5361 301	Slovakei Phone +386 (0)147 69 990
España Phone +34 93 480 31 00	South Korea Phone +82 2 786 6321/4
France Phone +33 1 64 62 39 00	Suomi Phone +358 9 25 15 800
Great Britain Phone +44 (0)1727 831121	Sverige Phone +46 10 110 10 00
India Phone +91 22 4033 8333	Taiwan Phone +886 2 2375 6288
Israel Phone +972 4 6801000	Türkiye Phone +90 (216) 528 50 00
Italia Phone +39 02 27 43 41	United Arab Emirates Phone +971 (0)4 8865 878
Japan Phone +81 (03) 5309 2112	USA/Mexico Phone +1 950 941 6780
Magnetsvædet Phone +36 1 371 2680	
Niederland Phone +31 (0)30 229 25 44	

SICK AG, Erwin-Sick-Strasse 1, D.79183 Waldkirch

Please find detailed addresses and additional representatives and agencies in all major industrial nations at www.sick.com

More representatives and agencies at www.sick.com - Subject to change without notice - The specified product features and technical data do not represent any guarantee.

Weitere Niederlassungen finden Sie unter www.sick.com - Irrtümer und Änderungen vorbehalten - Angegebene Produkteigenschaften und technische Daten stellen keine Garantieerklärung dar.

Plus de représentations et d'agences à l'adresse www.sick.com - Sujet à modification sans préavis - Les caractéristiques de produit et techniques indiquées ne constituent pas de déclaration de garantie.

Para mais representantes e agências, consulte www.sick.com - Alterações poderão ser feitas sem prévio aviso - As características do produto e os dados técnicos apresentados não constituem declaração de garantia.


Flere repræsentanter og agenturer på www.sick.com - Med forbehold for ændringer og fejl - De anførte produktetsgenskaber og tekniske data udgør ikke nogen garantierklæring.

Altri rappresentanti ed agenzie si trovano su www.sick.com - Contenuti soggetti a modifiche senza preavviso - Le caratteristiche del prodotto e i dati tecnici non rappresentano una dichiarazione di garanzia.

Meer vestigingen en correcties voorbehouden - Aangegeven producteigenschappen en technische gegevens vormen geen garantieverklaring.

Más representantes y agencias en www.sick.com - Sujeto a cambio sin previo aviso - Las características y los datos técnicos especificados no constituyen ninguna declaración de garantía.

欲了解更多代表机构和代理商信息，请登录 www.sick.com - 如有更改，不另行通知 - 对所给出的产品特性和技术参数的正确性不予保证。

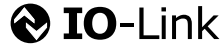

Please note the validity of the additional operating instructions for automation functions

ENGLISH

SICK device specific							
Index dec (hex)	Name	Format (Offset)	Length	Access ¹	Default Value	Value / Range	Remark [Unit]
180 (0xB4)	Current receiver level (live)	UInt	8 Bit	ro		0...255	[%]
181 (0xB5)	Upper threshold (switch-on) dynamic	UInt	8 Bit	ro		0...255	[%]
182 (0xB6)	Lower threshold (switch-off) dynamic	UInt	8 Bit	ro		0...255	[%]
190 (0xBE)	Operating hours	Record	8 Byte	ro			
1 (0x01)	Total operating hours	UInt (32)	32 Bit	ro		0...1000000	[h]
2 (0x02)	Operating hours since last reset	UInt (0)	32 Bit	ro		0...1000000	[h]
204 (0xCC)	Find me	UInt	8 Bit	rw	0	0 = Find me deactivated 1 = Find me activated	
226 (0xE2)	System state	Record ³	2 Byte	ro			
1 (0x01)	Detection output Quint.1	Bool (0)	1 Bit	ro		false = No object detected true = Object detected	
5 (0x05)	Quality of run alarm output	Bool (6)	1 Bit	ro		false = Alarm not active true = Alarm active	
6 (0x06)	Input signal state Pin 2	Bool (7)	1 Bit	ro		false = External input FALSE true = External input TRUE	
227 (0xE3)	Notification handling	UInt	8 Bit	rw	0	0 = All enabled 1 = All disabled 2 = Events enabled, PD invalid flag disabled 3 = Events disabled, PD invalid flag enabled	
1080 (0x438)	SLTI Version	String	8 Byte	ro			
1083 (0x43B)	Logic 1	UInt	8 Bit	rw	0	0 = DIRECT 1 = AND 2 = OR	
1084 (0x43C)	Logic 2	UInt	8 Bit	rw	0	0 = DIRECT 1 = AND 2 = OR	
1085 (0x43D)	Timer 1 Mode	UInt	8 Bit	rw	0	0 = deactivated 1 = T-on delay 2 = T-off delay 3 = T-on/T-off delay 4 = Impulse (one shot)	
1086 (0x43E)	Timer 2 Mode	UInt	8 Bit	rw	0	0 = deactivated 1 = T-on delay 2 = T-off delay 3 = T-on/T-off delay 4 = Impulse (one shot)	
1087 (0x43F)	Time 1 Setup	UInt	16 Bit	rw	1	1...30000	[ms]
1088 (0x440)	Time 2 Setup	UInt	16 Bit	rw	1	1...30000	[ms]
1089 (0x441)	Inverter 1	UInt	8 Bit	rw	0	0 = not inverted 1 = inverted	
1090 (0x442)	Inverter 2	UInt	8 Bit	rw	1	0 = not inverted 1 = inverted	
1093 (0x445)	Inverter Ext. Input	UInt	8 Bit	rw	0	0 = not inverted 1 = inverted	

Standard command					
Index dec (hex)	Name	Access ¹	Value	Name	Remark [Unit]
2 (0x02)	System Command	wo	65	Single value teach	
			129	Application Reset	
			130	Restore Factory Settings	
			131	Back-to-box	
			228	Reset diagnostics parameter	

Events			
Code dec (hex)	Name	Type	Remark [Unit]
30480 (0x7710)	Short circuit	Error	Shortcut on outputs
36001 (0x8CA1)	New parameters	Notification	Parameters have been changed
36004 (0x8CA4)	Quality of run alarm	Warning	Low device performance, clean sensor
36011 (0x8CAB)	Alarm operating hours	Warning	Threshold for operating hours violated

¹ ro = read only, wo = write only, rw = read/write

² COM values specify the bitrate (see IO-Link specification): COM1 (4,8 kbit/s), COM2 (38,4 kbit/s), COM3 (230,4 kbit/s)

³ Subindex access not supported

SICK

8029082 1223
9389042 1223

WLG4S_DID8389466

8389466

217489415

9389041 1223 (1.1.0)

Australia Phone +61 3 9457 0800	Osterreich Phone +43 (0)22 36 62 28 8-0
Belgium/Luxembourg Phone +32 (0)2 468 35 66	Norge Phone +47 67 61 50 00
Brasil Phone +55 11 5215-4900	Polina Phone +49 22 837 40 50
Canada Phone +1 905 771 14 44	România Phone +40 356 171 120
China (peoples) Phone +86 400 121 000 +86 2163 6300	Russia Phone +7 495 775 09 30
Denmark Phone +45 45 82 64 00	Schweden Phone +46 18 22 22 22
Deutschland Phone +49 211 5361 301	Sveits Phone +41 41 619 29 39
España Phone +34 93 480 31 00	Sveizjona Phone +43 6744 3732
France Phone +33 1 64 62 39 00	South Africa Phone +27 11 472 3733
Great Britain Phone +44 (0)1727 831121	South Korea Phone +82 2 786 6321/4
India Phone +91-22-4033 8333	Spain Phone +358 9 25 15 800
Israel Phone +972 4 6801000	Sverige Phone +46 10 110 10 00
Italia Phone +39 02 27 43 41	Taiwan Phone +886 2 2375-6288
Japan Phone +81 (03) 5309 2112	Türkiye Phone +90 (216) 528 50 00
Magnetsvædet Phone +36 1 271 2680	United Arab Emirates Phone +971 (0) 4 8665 878
Nederland Phone +31 (0)30 229 25 44	USA/Mexico Phone +1 950 941 6780

SICK AG, Erwin-Sick-Strasse 1, D 79183 Waldkirch

Please find detailed addresses and additional representatives and agencies in all major industrial nations at www.sick.com

8211463

ENGLISH

Error			
Code dec (hex)	Additional Code	Name	Remark [Unit]
128 (0x80)	17 (0x11)	Index not available	Read or write access attempt to a non-existing index.
128 (0x80)	18 (0x12)	Subindex not available	Read or write access attempt to a non-existing subindex of an existing index.
128 (0x80)	32 (0x20)	Service temporarily not available	Parameter not accessible due to the current state of the technology-specific application.
128 (0x80)	35 (0x23)	Access denied	Write access to a read-only parameter or read access to write-only parameter.
128 (0x80)	48 (0x30)	Parameter value out of range	Written parameter value is outside of the permitted value range.
128 (0x80)	51 (0x33)	Parameter length overrun	Written parameter is longer than specified.
128 (0x80)	52 (0x34)	Parameter length underrun	Written parameter is shorter than specified.
128 (0x80)	64 (0x40)	Invalid parameter set	Written single parameter value collides with other existing parameter settings.
128 (0x80)	65 (0x41)	Inconsistent parameter set	Parameter set inconsistencies at the end of block parameter transfer. Device plausibility check failed.

More representatives and agencies at www.sick.com - Subject to change without notice - The specified product features and technical data do not represent any guarantees.

Weitere Niederlassungen finden Sie unter www.sick.com - Irrtümer und Änderungen vorbehalten - Angegebene Produkteigenschaften und technische Daten stellen keine Garantieerklärung dar.

Plus de représentations et d'agences à l'adresse www.sick.com - Sujet à modification sans préavis - Les caractéristiques de produit et techniques indiquées ne constituent pas de déclaration de garantie.

Para mais representantes e agências, consulte www.sick.com - Alterações poderão ser feitas sem prévio aviso - As características do produto e os dados técnicos apresentados não constituem declaração de garantia.


Fiere representanter og agenturer på www.sick.com - Med forbehold for ændringer og fejl - De anførte produkttegnelser og tekniske data udgør ikke nogen garanti erklæring.

Altri rappresentanti ed agenzie si trovano su www.sick.com - Contenuti soggetti a modifiche senza preavviso - Le caratteristiche del prodotto e i dati tecnici non rappresentano una dichiarazione di garanzia.

Meer vestigingen en vertegenwoordigingen vindt u op www.sick.com - Wijzigingen en correcties voorbehouden - Aangegeven producteigenschappen en technische gegevens vormen geen garantieverklaring.

Más representantes y agencias en www.sick.com - Sujeto a cambio sin previo aviso - Las características y los datos técnicos especificados no constituyen ninguna declaración de garantía.

欲了解更多代表机构和代理商信息，请登录 www.sick.com - 如有更改，不另行通知 - 对所给出的产品特性和技术参数 的正确性不予保证。



Please note the validity of the additional operating instructions for automation functions