



SICK

8024030

Betriebsanleitung, Ergänzung DEUTSCH


Bitte lesen Sie die Betriebsanleitung **WTB4-3** und diese Betriebsanleitungsergänzung sorgfältig durch.

Ergänzung/Abweichung der technischen Daten zur Betriebsanleitung 8011166:

Typ: **WTB4-3P2102S98**

Artik.Nr.: **1100292**

1. Sensor mit Selbstüberwachung: Wird ein Objekt erkannt, schwingt der Schaltausgang Q mit 10 Hz.
2. Ansprechzeit: 0.1 s
3. Ist der Schaltausgang Q ausgeschaltet, ist kein Objekt vorhanden oder es liegt ein Sensorfehlerdefekt vor.
4. Schaltet der Ausgang kontinuierlich ein, liegt ein Sensorfehler vor.

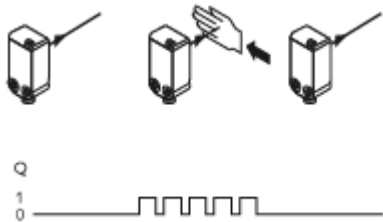

Irrtümer und Änderungen vorbehalten

SICK AG, D-79183 Waldkirch, Erwin-Sick-Str. 1, www.sick.com

Operating Instruction, Supplement ENGLISH


Please read the operating instruction **WTB4-3** and this operating instruction supplement carefully.

Supplement/deviation of technical data of the operating instructions 8011166:

Model Name: **WTB4-3P2102S98**

Part No.: **1100292**

1. Sensor with self-monitoring
2. Response time: 0.1 s
3. Output Q oscillates with 10 Hz when an object is detected.
4. When output Q is off no object is detected or sensor has a failure.
5. When output is continuously on the sensor has a failure.

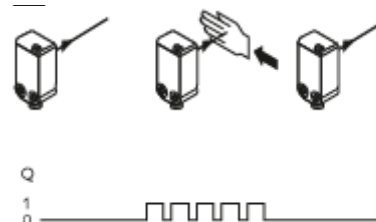

Subject to change without notice.

SICK AG, D-79183 Waldkirch, Erwin-Sick-Str. 1, www.sick.com