



SICK

8017470

Betriebsanleitung, Ergänzung DEUTSCH


Bitte lesen Sie die beiliegende Betriebsanleitung und diese Betriebsanleitungsergänzung sorgfältig durch.

Ergänzung/Abweichung der technischen Daten zur Quickstart MLG-2 Prime / Pro:

Typ: MLG10A-0290R1S609; MLG10A-0290R1S610

Artikelnr.: 1070285; 1070323

Geräte müssen versetzt montiert werden (siehe Abb.):

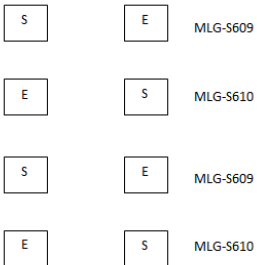

Bedingungen:

- Abstand zwischen den MLGs darf nicht kleiner als 80mm sein.
- Abstand Sender/ Empfänger max. 1200mm.

Einschränkungen:

- Verwendung nur in Applikationen mit nicht glänzenden Materialien
- Teach über SOPAS nicht erlaubt

Irrtümer und Änderungen vorbehalten

SICK AG, D-79183 Waldkirch, Erwin-Sick-Str. 1, www.sick.com

Operating Instruction, Supplement ENGLISH


Please read the enclosed operating instruction and this operating instruction supplement carefully.

Supplement/deviation of technical data of the quickstart MLG-2 Prime / Pro:

Model Name: MLG10A-0290R1S609; MLG10A-0290R1S610

Part No.: 1070285; 1070323

Devices must be installed offset to one another (see fig.):

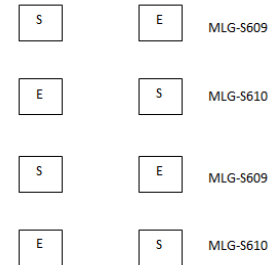

Conditions:

- Distance between MLGs must not be smaller than 80mm.
- Distance between sender/ receiver max. 1200mm.

Limitations:

- Usage in applications with non-glossy objects only
- Teach via SOPAS not allowed

Subject to change without notice.

SICK AG, D-79183 Waldkirch, Erwin-Sick-Str. 1, www.sick.com